



AT&T Vista™
User Guide

Contents

Getting started	10
Introduction	11
About the user guide	11
Set up your phone	12
Parts and functions	12
Battery use	15
Install a SIM/SD card	17
Use the touch screen	21
Complete the setup screens	22
Basic operations	23
Home screen and Apps list	24
Phone settings menu	27
Portrait and landscape screen orientation	28
Capture screenshots	29
Applications	29
Phone number	38
Airplane mode	39
Enter text	40
Google Account	44
Lock and unlock your screen	47
Home screen basics	48
Status bar and Notification panel	51
Customize the Home screen	56
Making connections	62
Phone	63
Make a call	63
Call settings	75
Contacts	77

Add a contact	77
Edit a contact	83
Delete a contact	84
Share a contact	84
Messages	86
Text and multimedia messages	86
Chat features	90
Messages settings	91
Gmail	94
Internet and social networking	98
Chrome browser	98
Facebook	99
Connectivity	100
Transfer files between your phone and a computer	100
Wi-Fi	103
Bluetooth	104
Apps and entertainment	110
Camera	111
Camera overview	111
Take a photo	114
Record a video	115
Take a portrait	116
Translate written words	116
Scan a QR Code	116
Camera settings	117
Photos	119
View photos and videos	119
Options while reviewing photos or videos	120
Edit photos	121
Share pictures and videos	123
Productivity	124

Calendar	124
Google Maps	128
Google Search	130
Clock	134
Entertainment and activities	142
YouTube	142
Settings	144
Basic settings	145
Network & internet	148
Wi-Fi	148
Wi-Fi Calling	151
Mobile network	152
Airplane mode	153
Hotspot & tethering	153
Data Saver	155
VPN (Virtual Private Networks)	155
Private DNS	156
Connected devices	157
USB	157
Connection preferences	158
Bluetooth	158
Cast	160
Printing	160
Files received via Bluetooth	161
Chromebook	161
Nearby Share	161
Android Auto	162
Apps	163
Recently opened apps	163
Default apps	164
Screen time	164

Unused apps	164
Special app access	164
Notifications	165
App settings	165
Notification history	165
Conversations	165
Bubbles	166
Device & app notification	166
Notifications on lock screen	166
Sensitive notifications	166
Do Not Disturb	167
Wireless Emergency Alerts	167
Hide silent notifications in status bar	168
Allow notification snoozing	168
Notification dot on app icon	168
Enhanced notifications	168
Battery	169
Battery usage	170
Battery Saver	170
Battery Manager	171
Battery percentage	171
Storage	172
Storage manager	173
SD card	173
Sound & vibration	174
Media volume	174
Call volume	174
Ring & notification volume	174
Alarm volume	175
Do Not Disturb	175
Phone ringtone	175

Media	175
Vibration & haptics	175
Default notification sound	175
Default alarm sound	176
Dial pad tones	176
Screen locking sound	176
Charging sounds and vibration	176
Touch sounds	176
Always show icon when in vibrate mode	176
Display	177
Brightness level.	178
Adaptive brightness.	178
Lock screen	178
Screen timeout.	178
Dark theme.	178
Night Light	178
Auto-rotate screen	178
Network name	179
Screen saver.	179
Lift to wake	179
Tap to wake	179
Wallpaper & style.	180
Change wallpaper	180
Dark theme.	181
Themed icons.	181
Accessibility	181
Downloaded apps.	182
Display size and text	182
Color and motion	182
Extra dim.	183
Magnification.	183

Timing controls	183
System controls	183
Vibration & haptics	184
Caption preferences	184
Real-Time text call	184
Audio description	185
Hearing aids	185
Audio adjustment	185
Accessibility shortcuts	185
Text-to-speech output	185
Security	186
Google Play Protect	186
Find My Device	187
Security update	187
Google Play system update	187
Screen lock	188
Face unlock	189
Smart Lock	190
Device admin apps	190
SIM card lock	190
Encryption & credentials	191
Trust agents	191
App pinning	191
Privacy	192
Privacy dashboard	192
Permission manager	192
Camera access	193
Microphone access	193
Show passwords	193
Notifications on lock screen	193
Android System Intelligence	193

App content	193
Show clipboard access	193
Autofill service from Google	194
Activity controls	194
Ads	194
Usage & diagnostics	194
Location	195
Recent access	195
App location permissions	195
Location services	196
Safety & emergency	197
Medical information	197
Emergency contacts	197
Emergency SOS	198
Crisis alerts	198
Emergency Location Service	198
Earthquake alerts	198
Wireless emergency alerts	199
Passwords & accounts	199
Passwords	199
Autofill service	200
Add account	201
Automatically sync app data	201
Digital Wellbeing & parental controls	202
Your Digital Wellbeing tools	202
Parental controls	203
Google	203
System	204
Languages & input	204
Gestures	206
Date & time	207

Backup	208
About phone	210
AT&T Software Update	211
Getting help	212
For assistance	213
Troubleshooting	213
Specifications	215
Licenses	216
Copyright information	217
Safety and use	218
Please read before proceeding	219
Important health information	
and safety precautions	219
Electrical safety	219
Safety precautions for proper grounding installation	219
Safety precautions for power supply unit	220
Electrical safety	225
Protect your phone	226
Regulatory agency identifications	230
FCC Regulations	230
RF Exposure Information (SAR)	231
Hearing Aid Compatibility	232
(HAC) for Wireless Telecommunication Devices	232
Warranty	233



Getting started

The topics in this section will introduce you to your phone, help you get set up with service, provide an overview of the phone screen, and get you started with basic phone operations.

Introduction

The following topics describe the basics of using this guide and your new phone.

About the user guide

Thank you for purchasing your new AT&T Vista™ Smartphone. The following topics explain how best to use this guide to get the most out of your phone.

Before using your phone

Read the Safety Information Guide that came with your device thoroughly for proper usage.

Accessibility services may be limited by subscription contract conditions.

Descriptions in the user guide

Note that most descriptions in this guide are based on your phone's setup at the time of purchase. Unless otherwise noted, instructions begin from the phone's Home screen, which is displayed by pressing the **Home** button . Some operation descriptions may be simplified.

Screenshots and key labels

Screenshots and other illustrations in this user guide may appear differently on your phone. Key labels are simplified for description purposes and differ from your phone's display.

Other notations

In the user guide, the phone may be referred to either as "phone," "device," or "handset." A microSD™ or microSDHC™ card is referred to as an "SD card" or a "memory card."

Set up your phone

The following topics give you all the information you need to set up your phone and wireless service for the first time.

Parts and functions

These topics illustrate your phone's primary parts and key functions.



Note: Your phone's screens and app layouts are subject to change. This user guide uses sample images only.

Part	Description
Headset port	Plug in a headset (sold separately) to listen to music or for convenient, hands-free conversations.
Microphone	Transmit your voice electronically for a call, voice recording, or Google Assistant™.
Rear camera	Take pictures and record videos with an 8MP auto-focus camera with multiple shooting modes.
Front camera	Take photos and record videos with the 5MP fixed focus front camera.
Receiver	Hear the caller and automated prompts.
Touch screen	<ul style="list-style-type: none">• View information needed to operate your phone.• Access your phone's features and applications.
Volume keys	Adjust the volume for ringtones, media, notifications, and system sounds.

Part	Description
Power/Lock key	<ul style="list-style-type: none">• Press to turn the screen on or off.• When device is powered off, press and hold to turn the phone on.• Press and hold along with the Volume Up key to access the phone's Power Menu to turn off the phone, restart, to make an emergency call, or more.• Press along with the Volume down key to take a screenshot.
Flash	<ul style="list-style-type: none">• Lighten up photos taken indoors or at night.• Use as a flashlight to see in dark areas.
Speaker	Listen to calls, automated prompts, and music.
USB Type-C charging & accessory port	Connect the Type-C USB cable (included) for charging or connect other accessories.

CAUTION! Inserting an accessory into the incorrect port may damage the phone.

Battery use

The following topics explain how to care for and remove your phone's non-removable battery.



Battery cautions


Storage: Avoid storing or leaving the battery with no charge remaining. Saved information and settings may become lost or changed, or the battery may become unusable. Charge once every six months before storing or leaving unused for a long period of time.

Charge the battery

Follow these instructions to charge your phone's battery using either the included AC adapter or via USB connection on your computer.

Charge using the AC adapter

1. Connect one end of the data cable to the USB port located on the bottom of your phone.

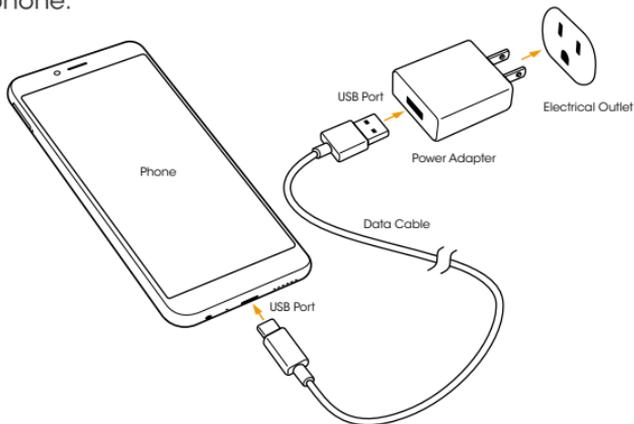


2. Connect the other end to the power adapter.
3. Connect the power adapter to an electrical outlet to fully charge your phone.
 - Use the power adapter that comes with your phone; using other adapters may damage your phone.
 - Charging your phone with a USB cable connected to a laptop will take longer than with the power adapter.
 - The phone will power off automatically when the battery is too low. Charge the battery if this happens. When the battery is critically low, the phone may need a few minutes to build a charge before turning back on. Playing games or performing other activities while charging may drain the battery and cause it to power off.
 - The battery will gradually discharge if it is left unused for an extended period. Before using the battery again, you must recharge it in order to power on and use your phone normally.

Install a SIM/SD card

Insert a Nano SIM/microSD card

Note: Your device comes with a pre-installed SIM card. Follow the below instructions to replace the pre-installed nano-SIM card or insert a microSD card.

1. On the left side of the phone, insert the ejector tool (included in box) to eject the SIM and microSD card tray.
2. Hold the SIM card with metal contacts facing downward and the cut corner at the top left. Slide the card into the SIM slot.
3. Hold the microSD card (sold separately) with metal contacts facing downward and the cut side on the bottom right. Slide the card into the microSD slot.

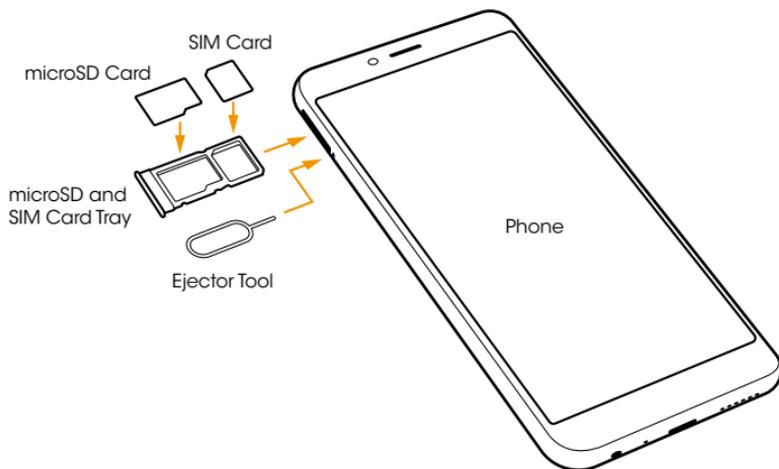

First Time Setup after Inserting an SD Card

When you insert an optional SD card for the first time, it is recommended that you set up and format it on your phone.


Note: Formatting your SD card will erase all files on the card. Make sure to back up your files in another location before formatting.

Set up an SD card

1. Swipe down on the Status bar.
2. Tap the SD card notification.
3. Select **Portable storage**.

Note: Setting your SD card as portable storage will allow you to transfer files (videos, music, and photos) from your device to another device with the SD card.

4. Tap **Done**.



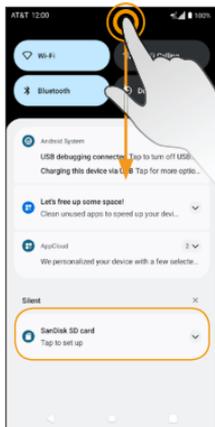


Note: During the setup process, you may be prompted to format the SD card. Follow the prompts to finish the formatting. You can also setup and format your SD card via Settings menu, refer to the steps described below.

Format an SD card

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Storage** .
3. Tap **This device** and select your **SD CARD**.
4. Tap **Menu**  and select **Format**.
5. Tap **FORMAT SD CARD** to confirm.

All data on the SD card will be erased, and the card will be formatted for use on your phone.

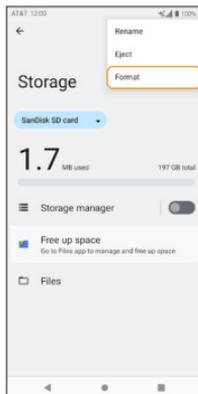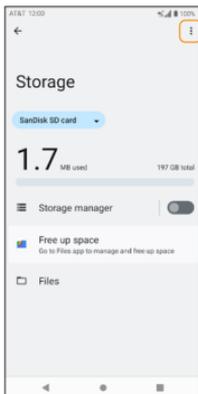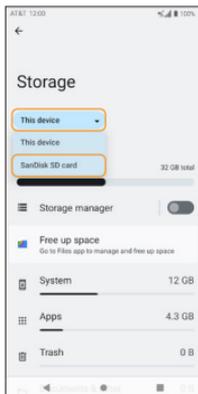

Remove an SD card

See page 17 for instructions to access the SIM/microSD card tray.

Turn your phone on and off

The instructions below explain how to turn your phone on and off.

Turn your phone on

Press and hold the **Power/Lock** key until the device turns on.

Turn your phone off

There are two ways you can use to turn your phone off.


- **Using Power/Lock key**

1. Press and hold the **Power/Lock** key and the **Volume up** key.
2. Tap **Power off**.

- **Via Quick Settings Panel**

1. Swipe down on the Status bar twice to enter Quick Settings panel.
2. Tap **Power icon**  > **Power off**.

Power/Lock key

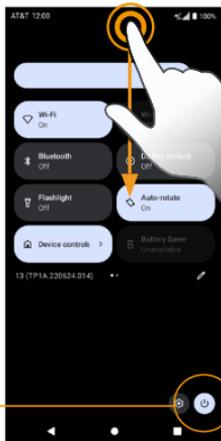

Power Icon

Use the touch screen

Your phone's touch screen lets you control actions through a variety of touch gestures.




Tap or touch

Tap or touch with your finger to type characters into the on-screen keyboard, select and open applications and settings, or press on-screen buttons.



Touch and hold

Touch and hold an item to view available options (for example, a contact or link in a Web page), or to move icons or widgets.

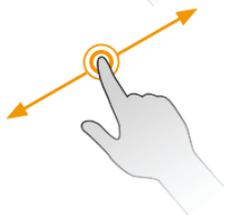

Swipe or slide

Quickly drag your finger vertically or horizontally across the screen to swipe or slide.



Drag

Touch and hold your finger with slight pressure, then move your finger slowly across the screen to drag. While dragging, do not release your finger until you have reached the target position.



Rotate

Rotate the phone sideways to change the screen orientation from portrait to landscape automatically. When entering text, you can turn the phone sideways to bring up a bigger keyboard. See "[Touch screen keyboards](#)" on [page 40](#) for more details.

Note: To activate Auto-rotate mode, swipe up from Home screen to access **Apps** and tap **Settings**  > **Display**  > **Auto-rotate screen**, and slide the switch to the **On**  position. You can also activate it by dragging the Status bar down twice and tapping **Auto-rotate** .



Pinch and spread

Use your thumb and forefinger in a pinching motion on your screen to zoom out, or spread them to zoom in when viewing a picture or a web page. (Move fingers inward to zoom out and outward to zoom in.)

Complete the setup screens

Once your service has been activated, you will need to run Setup. The Setup Wizard will appear to guide you through the basic settings on your device.

You will be prompted to select the language you want to use, set up your Wi-Fi connection, set a screen lock method, sign in to your Google™ Account, select location services, and more.

Follow the remaining instructions to finish your phone setup.




Basic operations

The following topics outline basic features and operations of your phone.

Home screen and Apps list

Most of your phone's operations originate from the Home screen or the **Apps** (applications) list.

1. From any screen, press the **Home** button. to display the Home screen.
2. From the Home screen, swipe up to access the **Apps** list.

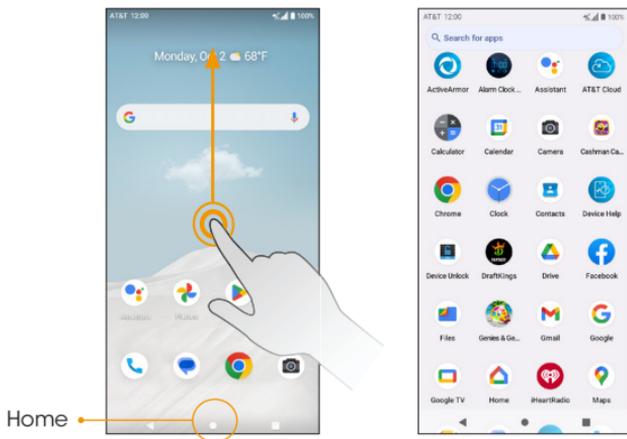

For information about using the Home screen, see [*"Home screen basics" on page 48.*](#)


Select options and navigate screens

Tap icons, on-screen buttons, and other items to open or activate the assigned function.

- Tap the **Back** button ◀ to return to the previous screen.


Recent applications

View your recently used applications by tapping the **Recent Apps** button ■. On recent applications screen, tap **Screenshot** to take a screenshot of the current-displayed card. After taking a screenshot, tap ➦ to share the card or ✎ to edit.

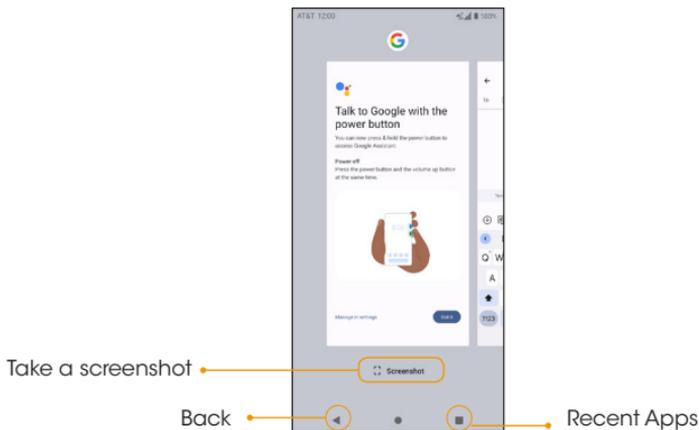

Switch between recently opened apps

You can easily switch between the apps you've recently opened. Tap the **Recent Apps** button  to see your recently opened apps.

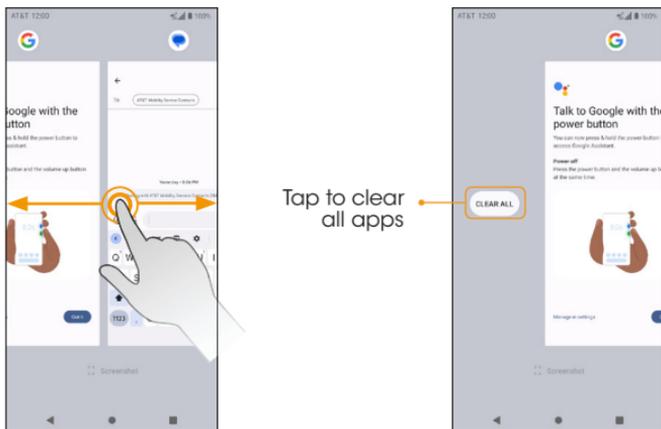

1. Swipe right or left through the cards to find an app and tap it.
2. To close an app, swipe up on it.
3. To close all of the apps and clear the list, slide to the far left of the list and tap **CLEAR ALL**.


You can tap the **Recent Apps** button  twice to switch between the two most recently used apps quickly while in this mode.

Phone settings menu

You can customize your phone's settings and options in the Settings menu.

There are two ways to access the Settings menu:

- From the Home screen, swipe up to access **Apps** and tap **Settings** .
- From any screen, swipe the Status bar down twice to access Quick Settings Panel and tap **Settings** .

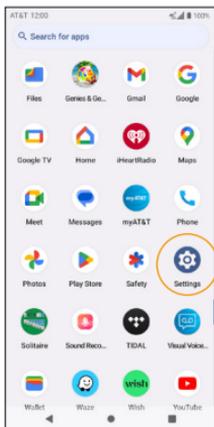



“or”



For more information, see [“Basic settings” on page 145.](#)

Portrait and landscape screen orientation

The default orientation for your phone's screen is portrait (vertical), but many apps will change to landscape orientation (horizontal or widescreen) when the phone is rotated sideways.

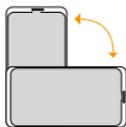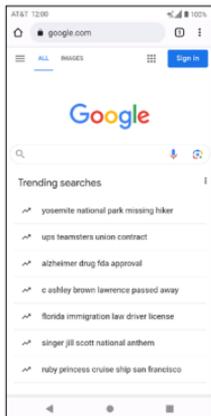

Note: Not all screens can be used in landscape orientation.

Turn screen rotation on or off

- Drag the Status bar down twice and tap **Auto-rotate**  to turn it on or off.
- You can also set the rotation option from the Settings menu. From the Home screen, swipe up to access **Apps** and tap **Settings** . Tap **Display** > **Auto-rotate screen** and slide the switch to the **On**  or **Off**  position to activate or deactivate screen rotation.


Capture screenshots

To capture a screenshot, press and hold the **Power/Lock** key and **Volume down** key at the same time to capture a screenshot of the current screen. Your screenshots will be stored in the Screenshots folder in the Photos app. From the Home screen, tap **Photos**  > **Library** > **Screenshots**.

Note: Without log in Google account directory: **Photos**  > **Screenshots**.

Applications

The following topics describe how to access the **Apps** list and launch applications on your phone.

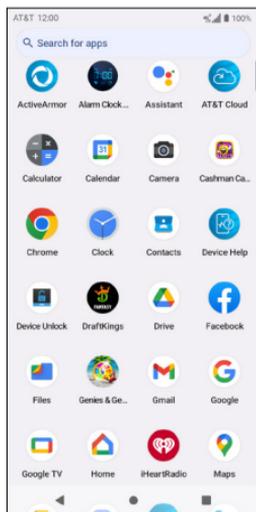

Launch apps


All installed apps can be accessed and launched from the **Apps** list.

1. From the Home screen, swipe up to access the **Apps** list.
2. Tap an app icon to launch the app.


Work with apps

Group app folders

1. From the Home screen, tap a group app folder to open and tap an app shortcut to launch the app.
2. To add more apps to the folder, drag each app over to the folder. See ["Add App folders to the Home screen" on page 60](#).

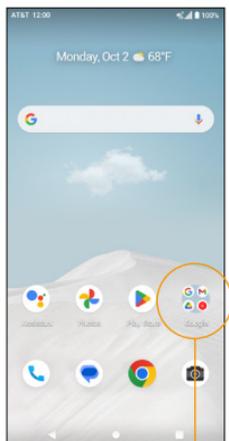


Tap
Folder

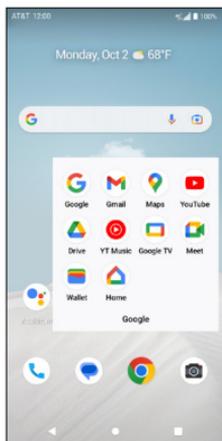

App shortcuts

Tap and hold an app icon on the Home screen or Apps list to display a shortcut menu that lets you quickly access common app functions.

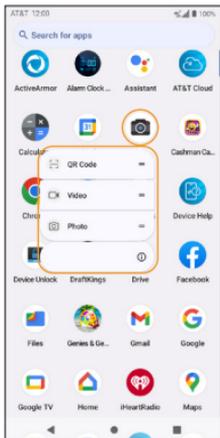

Note: Not all apps support the App shortcuts feature.

Control app permissions

The first time you open an app, you'll be asked to grant permissions to access certain data or features. This ensures that you have full control of which apps have authorized access.

If you don't want to grant access to an app, choose **DENY**. If you choose **DENY** in a trusted app, you may not be able to use the app or access all the functions. To modify permission settings, follow the steps below:

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Apps**  > **See all apps** and tap the app you want to modify permissions for.
3. Tap **Permissions** to view the apps you've allowed or haven't allowed.
4. Tap an app and select **Allow** or **Don't allow** to adjust the permission settings.

Note: These options may vary.

5. You can also access permission settings by touching and holding the app on the Home screen or **Apps** list, tapping **App info**  to access the app info screen, and then tapping **Permissions**.

Set default apps

You can choose default apps for web browsing, text messages, and more.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Apps**  > **Default apps**.
3. Choose your default web browser, phone app, messages app, and more.

Choose default apps



Some actions can be performed with more than one app. When performing an action for the first time, you may be prompted to choose an app. You can choose to use an app only this time by tapping **JUST ONCE** or tap **ALWAYS** to set that app as the default.

You can change the default app at any time in the Settings menu.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Apps**  > **Default apps**.

To change the default app for opening links, continue with the steps below:



1. Tap **Apps**  > **Default apps** > **Opening links**.
2. Tap the app you want to set and tap **Open supported links** to allow the listed verified web links to open in this app.

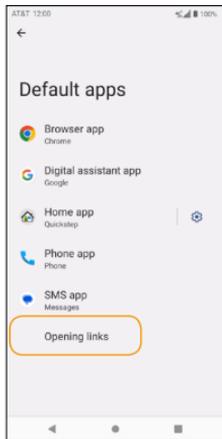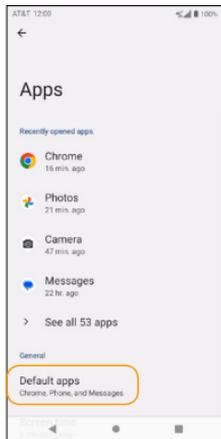

Disable an app

You can disable some default apps which can't be uninstalled to avoid them running in the background and downloading data.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Apps**  > **See all apps**.
3. Tap the app you want to disable to access App info screen.
4. Tap **DISABLE**.

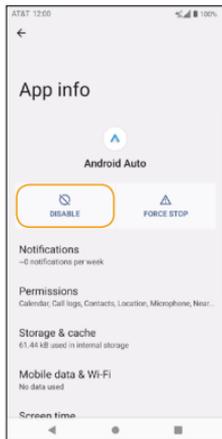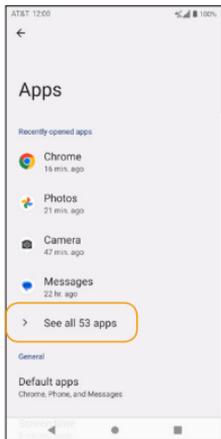

Tip: You can also disable apps by touching and holding the app on the Home screen or in the Apps list, tapping **App info**  to access the App info screen, and tapping **DISABLE**.

Apps list

The **Apps** list expands to include any apps you download and install on your phone. The following table outlines the primary apps that have been preinstalled on your phone.


App	Function/ Service
 Assistant	Use voice assistant to trigger apps and devices, ask all kinds of questions, make plans, and carry out a variety of useful tasks.
 Calculator	Perform basic and advanced mathematical calculations.
 Calendar	Create and manage events, meetings, and appointments, organize your time, and schedule reminders for important events.
 Camera	Take portraits, pictures and videos, and translate texts.
 Chrome	Surf the Internet with Google's easy-to-use web browser.
 Clock	Set alarms, view time zones around the world, set a timer, use a stopwatch, manage your bedtime, and use your phone as a desk clock.
 Contacts	Manage all of your contacts in one place.

App	Function/ Service
 Drive	Store files on Google servers, synchronize files across devices, and share files with other Google Accounts.
 Facebook	Post updates, see what your friends are up to, upload pictures and check-ins, and more with on-the-go Facebook access.
 Files	Access all of your documents, pictures, videos, and downloads.
 Gmail	Send, receive, and manage your email messages. This app supports email accounts for Gmail, Yahoo!®, Hotmail®, and more.
 Google	Search for information saved on the phone and within phone applications as well as on the Internet.
 Google TV	Buy or rent movies and TV shows, and watch them on your TV, smartphone, tablet, etc.
 Home	Control thousands of compatible lights, cameras, speakers, and more, as well as check your reminders and recent notifications, all from a single app.

App	Function/ Service
 Maps	Determine your location, find directions, browse local businesses and attractions, rate and review places, and more.
 Meet	Make free high-definition video calls to your friends and family.
 Messages	Send and receive text and multimedia messages.
 Phone	Place and receive calls, use voicemail, set up and manage contacts, and more.
 Photos	Manage your photos and back them up to your Google Account.
 Play Store	Download new Android apps, books, movies, and music to your phone.
 Settings	Adjust options, personalize your phone, view device information, and more.
 Sound Recorder	Record sounds and play them back.
 Wallet	Pay with your Android phone at participating stores and within mobile apps.

App	Function/ Service
 YouTube	Watch videos or upload your own with the world's largest video-sharing site.
 YT Music	Stream and browse playlists, albums, and artists from YouTube Music.

Phone number

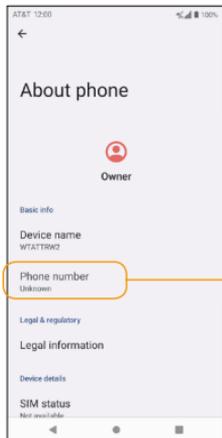

Follow the instructions below to view your phone number.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **About phone** .
3. You will see the phone number listed under **Phone number**.

Phone number

Airplane mode

Airplane mode turns off all functions that emit or receive signals while leaving your phone on so you can use apps that don't require a signal or data.

To turn on Airplane mode

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Network & internet**  > **Airplane mode**.
3. Slide the switch to the **On**  position to activate Airplane mode.

You will see the Airplane mode icon  in the Status bar.

To turn off Airplane mode

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Network & internet**  > **Airplane mode** .
3. Slide the switch to the **Off**  position to deactivate Airplane mode.

Your phone's wireless connection features will be restored.

Tip: You can also access Airplane mode through the Quick Settings menu. Swipe the Status bar down twice to access the Quick Settings menu, swipe to the right to locate **Airplane mode**, and tap it to enable or disable data transmissions.



Enter text

You can type on your phone using one of the available touch screen keyboards or Google Voice Typing.

Touch screen keyboards

Your phone offers Google touch screen keyboards for entering text. The keyboard appears automatically on-screen when you tap a text entry field and can be used in either portrait or landscape mode. You can also use Google Voice Typing to enter text using your voice (see ["Google Voice Typing" on page 41 for details](#)).

Note: Keyboard layouts and options may change depending on the app currently in use. For example, if you're entering text into a web search, a **Search** icon may appear instead of an **Enter** icon.

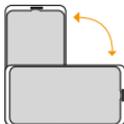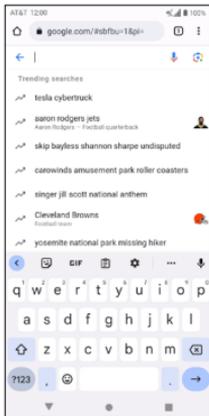

Google keyboard

The Google keyboard offers a traditional QWERTY keyboard setup for entering text by tapping keys (like on a computer), along with options that allow you to enter text faster and more accurately, such as continuous key input, personalized usage dictionaries, and more.



Access Google keyboard settings

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **System**  > **Languages & input** > **On-screen keyboard** > **Gboard**.

Google Voice Typing

Google Voice Typing uses Google Voice recognition to convert speech to text.

- From Messages screen, tap  and speak.

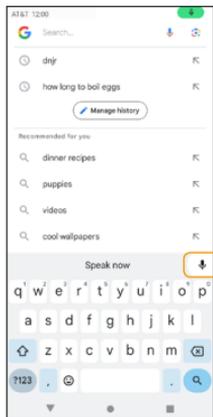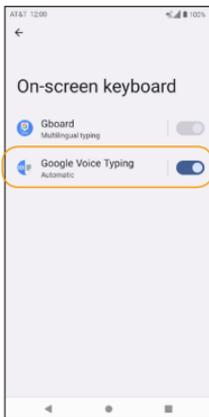


Tips for editing text

Your phone has many options to make entering text easier, including copying, cutting, and pasting text, using voice-to-text input, customizing the user dictionary, using predictive text, and more.

To edit text you have already entered


1. Touch and hold or double tap the text you would like to edit.
2. Drag the tabs to adjust the highlighted selection.
3. The following options will appear: **Cut**, **Copy**, **Paste** (if you have text copied on the clipboard), **Share**, and **Select all** (if there is more than one word available to select).

Tap and hold
or double-tap
to select text

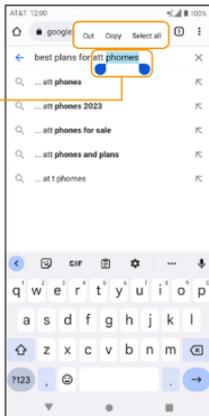

To insert new text

1. Touch where you want to type, the cursor and tab will appear. Drag the tab to move the cursor.
2. Tap the tab to view the pop-up menu, then tap **Paste** to insert any text you have previously copied.

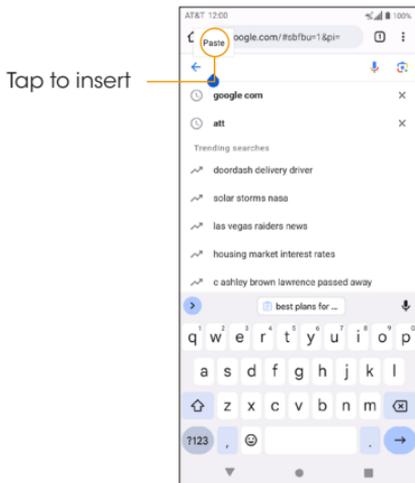

Google Account

You will need a Google Account to access several phone features, such as Gmail, Google Maps, Meet, and Google Play Store. Enter your Google Account information to access Google apps. These apps sync between your phone and your online Google Account.

Create a Google Account

If you do not already have a Google Account, you can create one online or using your phone.


Note: You can also create and sign into your Google/Gmail account from the Settings menu.

Create a Google Account online

1. Using a computer, visit google.com.
2. On the main page, click **Sign in > Create account > For myself**.
3. Follow the prompts to set up your account:
 - a. Enter your first and last name, a desired username/Gmail address, and create and confirm a password.
 - b. Add a phone number or secondary email for security (optional).
 - c. Enter basic personal information.
4. Tap **I agree** to accept Google's Privacy and Terms and finish your Google Account setup.

Create a Google Account using your phone

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Passwords & accounts**  > **Add account**.
3. Tap **Google** .

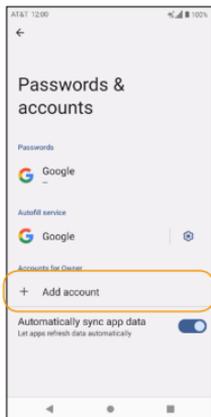

4. Follow the prompts to set up your account. Tap **Next** to proceed between steps, which may include:
 - a. Enter your basic information such as first and last name.
 - b. Enter a desired username/Gmail address.
 - c. Create and confirm a password.
 - d. Add a phone number for security or tap **Skip**.
 - e. Review your account info. Tap **Next** to confirm.
5. Tap **I agree** to accept Google's Privacy and Terms and finish your Google Account setup.

To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, do not use the application.

Lock and unlock your screen

You can quickly turn your phone screen off when not in use and unlock it when you need it.

Note: For information on how to adjust the time before the screen turns off, see ["Display" on page 177](#).

Turn the screen off when not in use

To quickly turn the screen off, press the **Power/Lock** key.

Pressing the **Power/Lock** key again or receiving an incoming call will turn on your phone screen and display the lock screen.

To save battery power, your phone screen will automatically turn off after being idle for a period of time. You will still be able to receive messages and calls while the phone's screen is off.

Turn the screen on and unlock it

1. To turn the screen on, press the **Power/Lock** key.
2. Swipe up from the bottom of the screen to unlock it.

If you have set up a screen lock, you will be prompted to unlock your phone. See ["Screen lock" on page 188](#) for details.


The following topics describe how to use and customize your phone's home screen, understand the Status bar, and use the Notification panel.

Home screen basics

The Home screen is the starting point for your phone's applications, functions, and menus. You can customize your Home screen by adding application icons, shortcuts, folders, widgets, and more.

Home screen layout

Your Home screen extends beyond the initial screen. Swipe right to display additional screens.

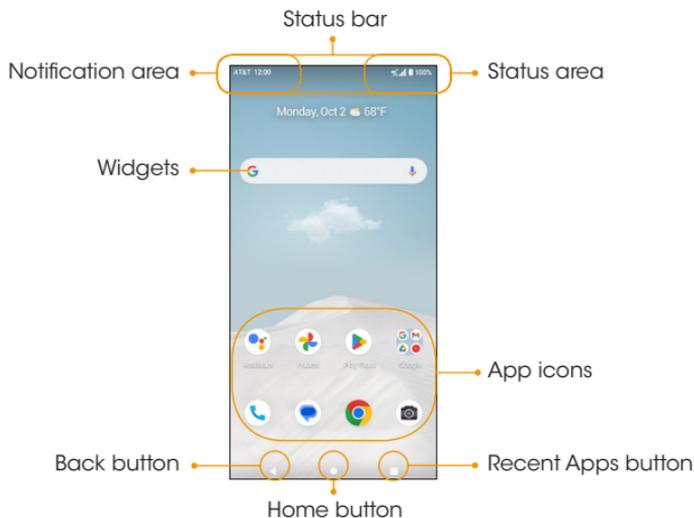


Item	Description
	Add shortcuts to your favorite apps to the home screen.
	Tap to return to the previous screen.
	Tap to display the main Home screen.
	<ul style="list-style-type: none"> • Tap to display a list of recently used apps. • Double tap to swap between your last two used apps.
	View notifications for incoming messages, missed calls, application updates, and more. Drag the Status bar down to display the Notification panel.
	View phone and service status information such as signal strength, battery status, Wi-Fi and data connectivity, ringer status, and time.
	Icons indicate your phone's status (on the right side) and notifications (on the left side).
	Add customizable quick access to app functions on your phone's Home screen.

Extended home screens

In addition to the main Home screen, your phone features extended Home screens to provide more space for adding icons, widgets, and more. Press the **Home** button  to display the main Home screen, then swipe to the right to move from the main screen to an extended screen.

Tip: While on an extended screen, press the **Home** button  to return to the main Home screen.

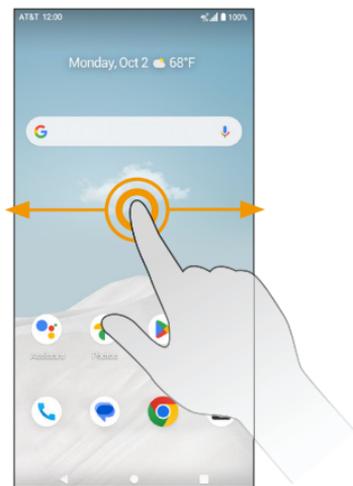

Status bar and Notification panel

Quickly view your phone's status and notifications at the top of the screen.

Status bar

The Status bar at the top of the Home screen provides phone and service status information on the right side and notification alerts on the left. To view the Notification panel or access the Quick Settings menu, drag the Status bar down from the top of the screen.

Main status icons (Right side)

Icon	Status
	4G LTE data service
	Airplane mode enabled
	Battery (charging)
	Battery (full charge)
	Bluetooth® connected
	GPS in use
	Headphones
	Hotspot
	Mute on

Icon	Status
	Network (full signal)
	No Network
	Mobile data unavailable
	Speakerphone enabled
	Wi-Fi® enabled
	Wi-Fi® Calling enabled

Main notification icons (Left side)

Icon	Status
	Alarm
	Download
	Event
	Keyboard active
	Missed call
	New Gmail
	New text or MMS message
	New voicemail
	Software update available
	Warning
	Wi-Fi® Calling
	Wi-Fi network available


Note: Additional notification icons may appear. All notifications may be accessed through the Notification panel.

Notification panel

Your phone's notifications appear on the left side of the Status bar. Access the full Notification panel by dragging down the Status bar to check notifications, download updates, open messages apps, access the Quick Settings menu, and more.

Open the Notification panel

1. Swipe down on the Status bar.

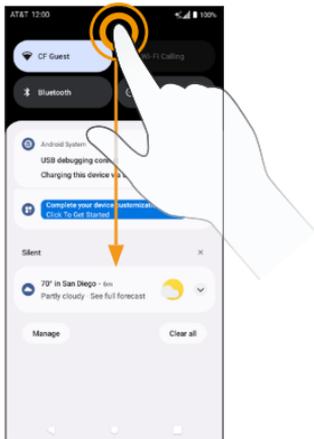

2. To check notifications, tap an item in the list.

Close the Notification panel




Swipe up to close the Notification panel or tap the **Back** button ◀.

Notification panel layout

The Notification panel gives you access to both notifications and the Quick Settings menu.

To access the Quick Settings menu:

1. Swipe the Status bar down to display the Notification panel.
2. Swipe the Status bar down again to access the full Quick Settings menu.

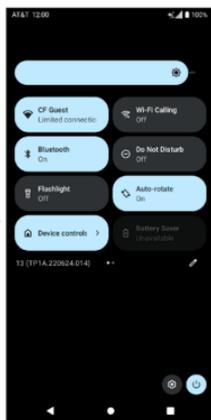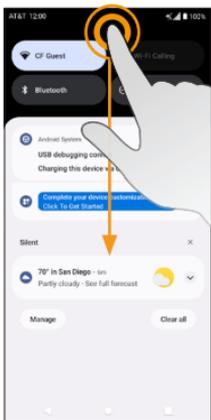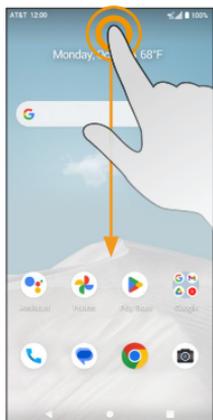

Customize the Home screen

Learn how to set the wallpaper and add, move, or remove shortcuts, widgets, and folders from the Home screen.

Operations for rearranging the Home screen

To move widgets and app shortcuts icons

From the Home screen, touch and hold an app or widget and drag it to the desired location.

To delete widgets and app shortcuts icons

From the Home screen, touch and hold an app or widget and drag it to  **Remove** at the top of the screen to delete from the Home screen.


To display the Home screen menu

From the Home screen, touch and hold an empty space to display the Home screen menu. Change wallpapers, add widgets, and adjust other Home screen settings from the Home screen menu.


Change the wallpaper

1. From the Home screen, touch and hold an empty space, then tap **Wallpaper & style**  on the Home screen menu.

Tip: You can also access the Wallpapers menu from the Settings menu. From the Home screen, swipe up to access **Apps** and tap **Settings**  > **Wallpaper & style** .

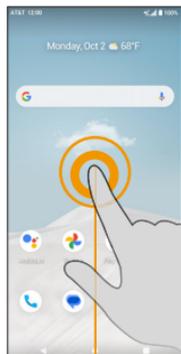


Touch and hold
an empty space

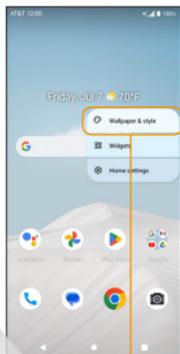

Tap Wallpapers
& style



Tap CHANGE
WALLPAPER

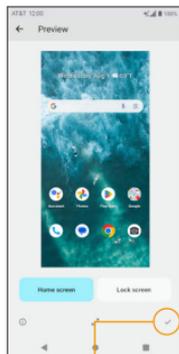

Tap to
apply changes

2. Tap **CHANGE WALLPAPER**, select the wallpaper from your photos or standard wallpapers folders.
3. Tap **Set wallpaper** and choose to set the wallpaper on the Home screen, Lock screen, or both.

Change the color theme

1. From the Home screen, touch and hold an empty space, then tap **Wallpaper & style**  on the Home screen menu.



Tap Wallpapers



Wallpaper colors



Basic colors

2. Choose desired color theme.
 - Tap **Wallpaper colors** tab and select the desired color combination which comes from the set home screen and lock screen wallpapers.
 - Tap **Basic colors** tab and select the desired basic color.

Add shortcuts to the Home screen

Add shortcuts for quick access to favorite apps from the Home screen.


1. From the Home screen, swipe up to access **Apps**.
2. Touch and hold an app icon, then drag to move it.

3. Drag the icon to an empty location on one of the Home screens. The shortcut will be added to the Home screen.

Add widgets to the Home screen

Widgets are self-contained apps on the Home screen. Unlike a shortcut, which will open an app, widgets can perform certain functions without navigating away from the Home screen. You can create widgets for a specific contact, for bookmarks to web pages, your calendar, email, and more.

1. From the Home screen, touch and hold an empty space, and then tap **Widgets** in the Home screen menu.

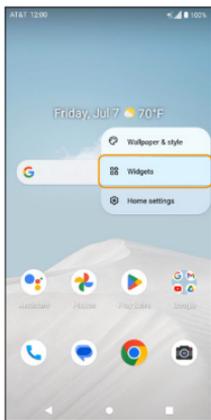

2. Touch and hold a widget, then drag it to an empty location on one of the Home screens. The widget will be added to the Home screen.

Add App folders to the Home screen

You can group Home screen shortcuts into folders for convenient access.


1. Drag an app icon and release it over another app icon on the Home screen to create a folder.



Drag an icon over another icon



Tap to edit a folder name

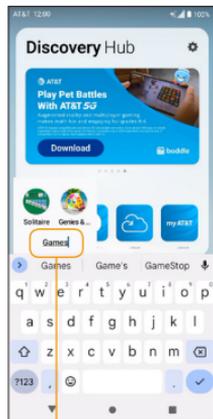

Enter a folder name

2. Type a name for the folder, and then tap .
3. To add more app shortcuts to the folder, touch and hold an app icon and drag it on top of the new folder.

Change folder names

Once you have added folders, you can change the name easily from the folder display.


1. Tap the folder to open it.
2. Tap the folder name, type a new name, and then tap .

Remove folder

Touch and hold a folder and drag it to **Remove** at the top of the screen.

Remove apps from a folder

1. Tap a folder to open it.
2. Touch and hold an app in the folder and drag it to the Home screen or to **Remove** at the top of the screen.

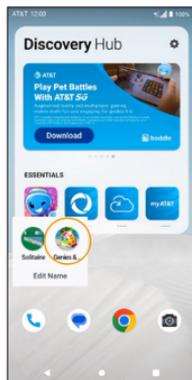



Making connections





The topics in this section will explain how to help you make connections, from phone calls and maintaining contacts, to text messages, email, Internet, and international services.

Phone

Make a call

From the Home screen, tap **Phone** .



- If the keypad does not appear on the screen, tap  to open it.
- Enter a phone number in the keypad to make a call. Tap  to make a call.
- To view recent calls, tap the **Recents**  tab.
- During a call, you can tap  at the bottom of the screen to hang up.

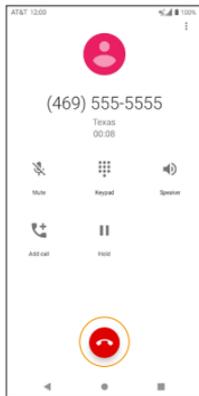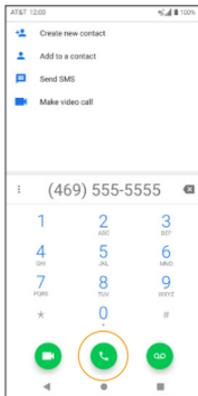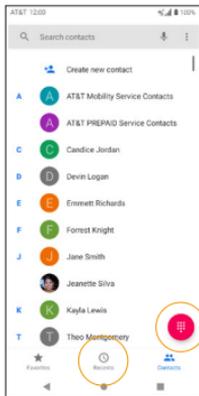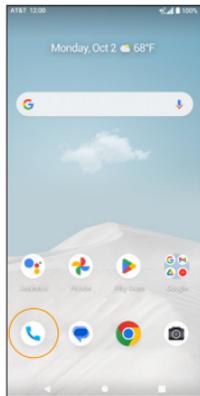

- Calls can also be made from other apps that contain your contact information. Simply tap the phone number to make a call.

Make a Video Call

1. From the Home screen, tap **Phone** .
2. If the keypad does not appear on the screen, tap  to open it.
3. Enter a phone number in the keypad to make a call.
4. Tap  to make the Video Call.
5. During a call, you can tap  at the bottom of the screen to hang up.

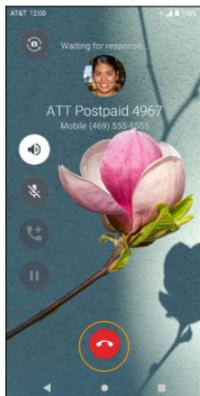
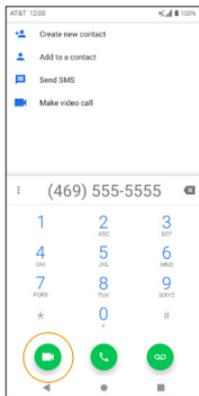


Note: You and the recipient must have a service plan that supports Video Call to send and receive Video Calls.

If the Video Call feature is turned off, you can go to call settings to enable it. From the calls screen, tap **Menu**  : **Settings** > **Calls** > **Video Call** and slide the switch to the **On**  position to enable it.

Make a call with Wi-Fi Calling


1. From the Home screen, tap **Phone** .
2. If the keypad does not appear on the screen, tap  to open it. Enter a phone number in the keypad to make a call.
3. Tap  to make the call.
4. During a call, you can tap  at the bottom of the screen to hang up.

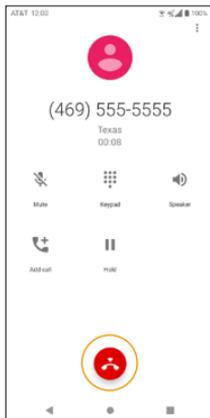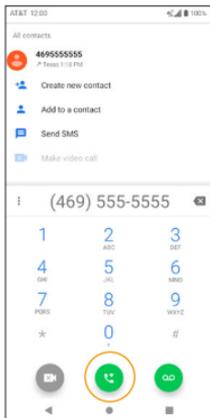

Note: You must have an active Wi-Fi connection and have Wi-Fi Calling service activated on the device before it can be used. To turn on Wi-Fi Calling, you will need to set up an emergency address to help emergency services find you if you make an emergency call (911). For more information, see ["Wi-Fi Calling" on page 151](#).


Receive a call

The Incoming Call screen is displayed when a call is received, along with the caller's number and other information you've entered for that contact. When you receive a phone call from someone who is not stored in Contacts, only the default caller ID icon and phone number appear on the Incoming Call screen.

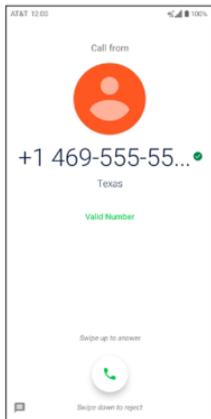

- To answer a call, swipe  up.
- To reject a call, swipe  down.
- Press any side key to mute the ringer.
- Any missed calls are logged in the **Recents**  tab.

Receive a Video Call

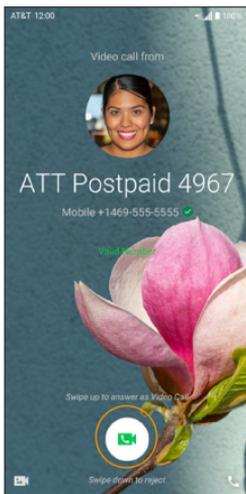

- To answer a Video Call, swipe  up.
- To reject a Video Call, swipe  down.
- Press any side key to mute the ringer.
- Any missed Video Calls are logged in **Recents**  tab.



You can also reject or accept an incoming Video Call as a voice call.

- To answer as a voice call, swipe  up.
- To reject as a voice call, swipe  down.

Reject a call and send a text message

You can reject an incoming call and automatically send a quick response text message to the caller.

- When a call arrives, swipe  up from the bottom left corner of the screen. The ringtone or vibration will stop, and you will see a list of quick preset responses.

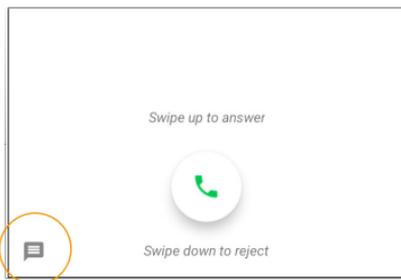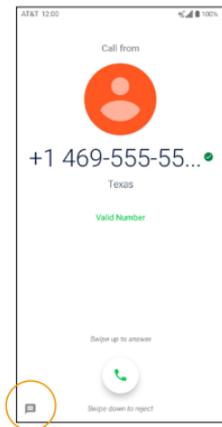

Tap one of the messages or write your own to send to the caller.



You can edit the preset quick responses from the Call Settings menu. From the **Phone**  app, tap **Menu**  > **Settings** > **Quick responses** and edit the quick responses.

In-call screen layout and operations

While you're on a call, you will see a number of on-screen options.

In-call screen layout

Tap the on-screen options to activate them during a call.

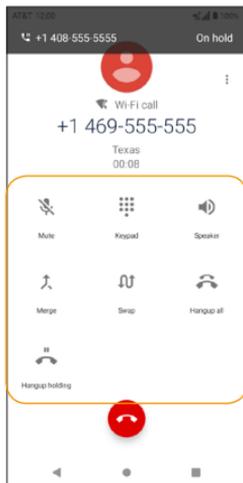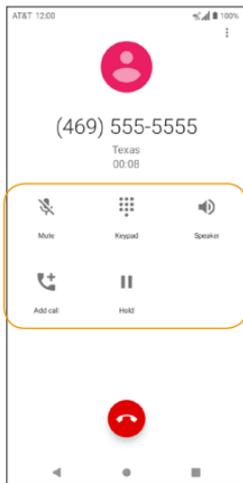

On-screen options



On-screen options

Item		Description
	Overflow Menu	Tap and select Switch to RTT to send the caller a Real-time text during a call.
	Speaker	Tap to turn the speakerphone on or off. Warning: Because of higher volume levels, do not place the phone near your ear during speakerphone use.
	Mute	Mute the microphone during an active call. Tap again to unmute the microphone.
	Keypad	Tap to show the on-screen keypad. Use the keypad to enter additional numbers, for example, an extension or access code.
	Hold	Tap to hold the current call.
	Add call	Tap to initiate a 3-way conference call.
	Video call	Tap to switch to video call.
	End call	End the current call.

Item		Description
	Merge	Join two currently active calls (conference).
	Swap	Swap the calls.
	Hang up all	Hang up all active calls.
	Hang up holding	Hang up on hold calls.
	One way video	Share your video feed with the person you are calling.

In-call Video Call screen layout

Tap the on-screen options to activate them during a call.

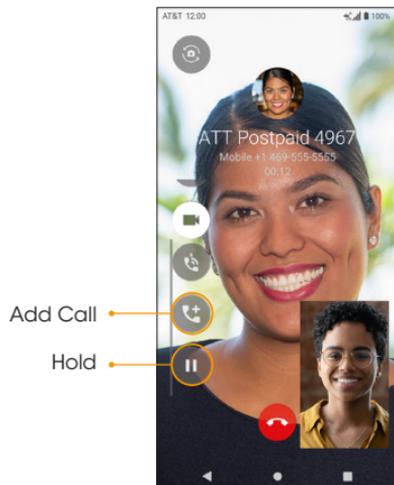
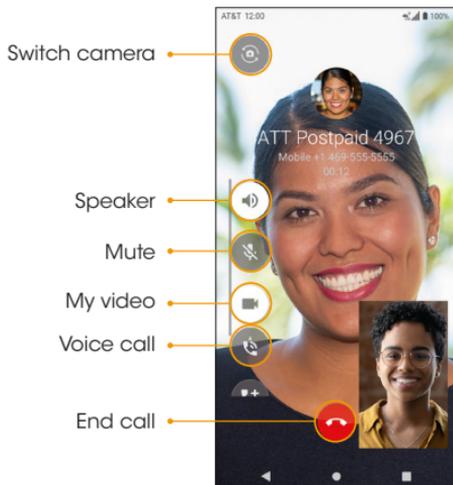


Item	Description
 Camera switch	Tap to switch between front camera and rear camera.
 My video	Tap to turn your video on or off.
 Voice call	Tap to switch from Video Call to voice call.

Place a call from Contacts

You can place phone calls directly from your Contacts list.

1. From the Home screen, tap **Phone** .
2. Tap **Contacts**  to display the Contacts list.

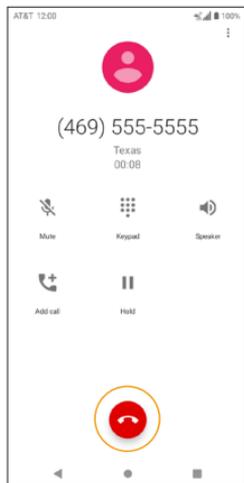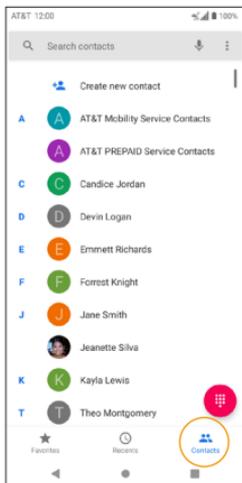


3. Tap a contact.
4. Tap a contact's number to call to place a call.
5. To end the call, tap .

Call from Recents

The Recents list allows you to view recently received, placed, or missed calls.


1. From the Home screen, tap **Phone** .
2. Tap **Recents**  to display the Call Log.
3. Tap  to place a call.

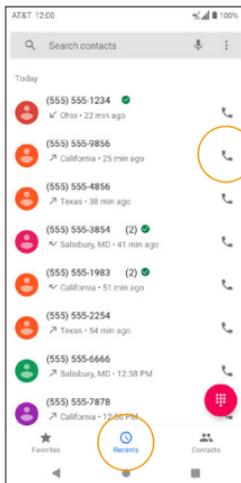

Tap to return call

You can tap a contact in the Call Log to display more options.

- **Voice Call:** Initiate a voice call to the contact/number.
- **Video Call:** Initiate a video call to the contact/number.
- **Send a message:** Send a text message to the contact/number.

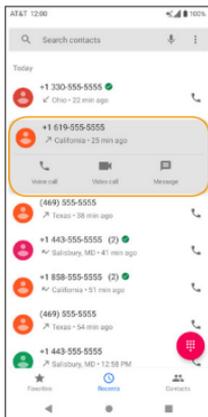

Tap a contact to display options

Call settings

Configure your voicemail options and a number of other settings for your calls.

Call settings options

1. From the Home screen, tap **Phone** .
2. Tap **Menu**  > **Settings**.
3. Configure your phone settings.

Call settings options



Setting	Description
Display options	Choose how to sort and display your contacts.
Sounds and vibrations	Adjust call and ringtone volume, change your alert tones, activate Do Not Disturb, and more.
Quick responses	Edit or create quick response text messages. See <i><u>"Reject a call and send a text message" on page 68</u></i> for more information.
Calls	Set call forwarding or call barring, enable or disable Wi-Fi Calling or Video Call, and more.
Blocked numbers	Manage numbers and contacts you have blocked.
Voicemail	Set up voicemail, manage notifications, and more.
Accessibility	Configure RTT settings and enable or disable hearing aid compatibility.
About	View more information about your phone.

Contacts

Add a contact



You can add contacts from the Contacts app. Enter details such as name, phone numbers, email addresses, mailing addresses, and more.

1. From the Home screen, swipe up and tap **Contacts** .
2. Tap  to add a contact.

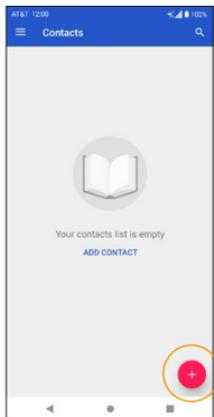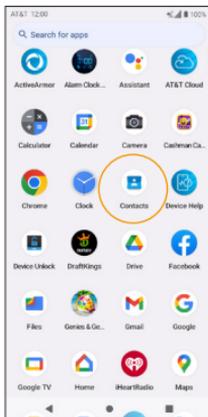

3. If you have multiple accounts on your phone, select where you want to save the contact.
 - Select **Device** to save your contact on your phone only; they will not be synced with your Google Account.
 - Select an account, such as Google, to save the contact to that account. These will be synced automatically with your account.

- Select your SIM card or SD card name to save the contact to your SIM card. Your contact will be available on any phone your SIM card is mounted in.

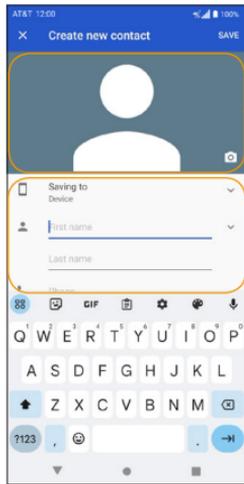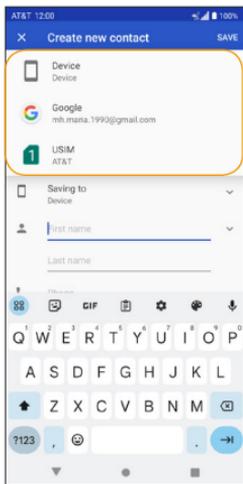

4. Use the keyboard to enter information.



Note: To select a type (label) for a phone number, email address or postal address (such as Mobile, Home, Work, etc.), tap the arrow and select the appropriate type.

5. When you are finished, tap **SAVE**.

Save a phone number

You can save a phone number to Contacts directly from the phone keypad.

1. From the Home screen, tap **Phone**  > **Keypad** .
2. Enter a phone number and tap **Create new contact** to add a new contact or tap **Add to a contact** to add the number to an existing contact.

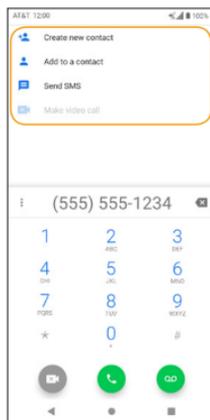
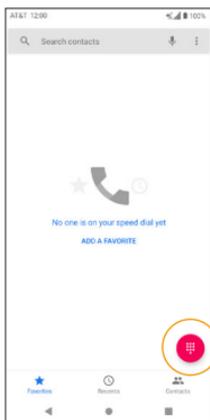


3. To add the number to an existing contact, tap the contact you want to update and add the number to the desired field. To add a new contact, enter the name and any additional information.
4. Tap **SAVE**.


View contacts

View a contact's details.

1. From the Home screen, swipe up and tap **Contacts** .
2. Tap a contact to view their details.

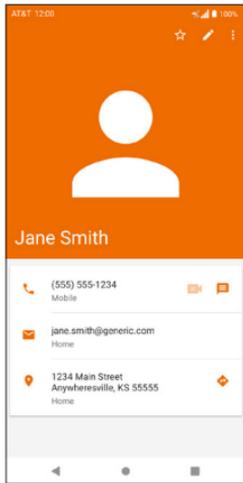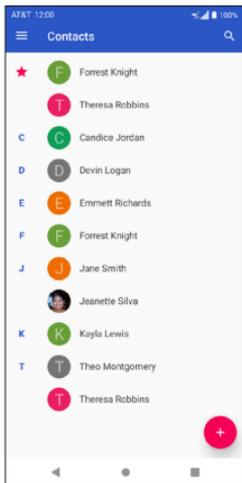

Contacts screen layout

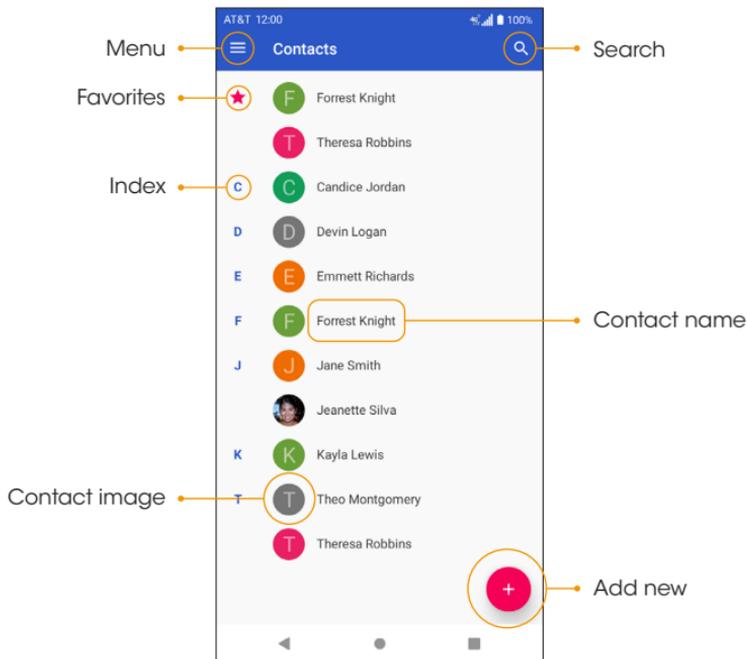



Contacts screen options

Item	Description
Add new	Add a new contact.
Contact	Tap to show a contact's details, place a call, send a message, and more.
Favorites	Add a contact as a favorite. You can view your favorite contacts in the Phone app.
Index	Browse contacts alphabetically.
Menu	View your contacts by labels or accounts and adjust settings.
Search	Search contacts.

Edit a contact

Add or edit a contact's information, assign a photo, customize with a unique ringtone, and more.

1. From the Home screen, swipe up and tap **Contacts** .
2. Tap a contact to view their details.
3. Tap **Edit** .

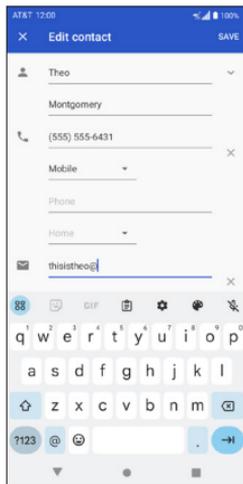
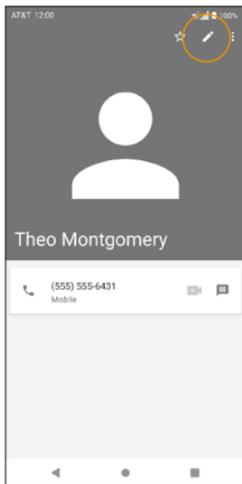


4. Tap the field you want to change or add.
5. Add or edit the information, and then tap **SAVE**.

Delete a contact

You can delete a contact from the contact's details page.

1. From the Home screen, swipe up and tap **Contacts** .
2. Tap a contact to view its details.
3. Tap **Menu**  > **Delete**.

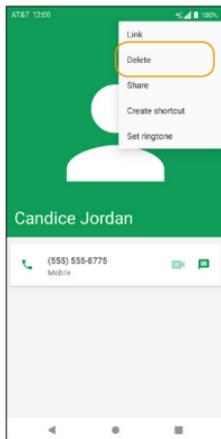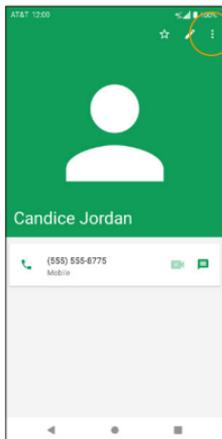


4. Tap **DELETE**.

Share a contact

You can quickly share contacts using Bluetooth, Gmail, or text messages.

1. From the Home screen, swipe up and tap **Contacts** .
2. Tap a contact and tap **Menu**  > **Share**.

3. Select how you'd like to share the contact information card (vCard).

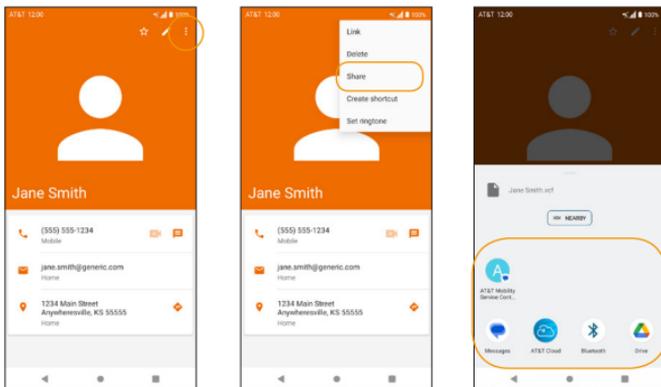

- **NEARBY:** Send the vCard to a nearby device. See [“Nearby Share” on page 161](#) for more information about nearby share.
- **Messages:** Send the vCard in a text message. You can send the information in an existing conversation thread or create a message for a new conversation thread. See [“Text and multimedia messages” on page 86](#) for more information about sending messages.
- **Gmail:** Send the vCard as a Gmail attachment. See [“Create and send an email message” on page 94](#) for more information on sending emails.
- **AT&T Cloud:** Save the vCard to AT&T Cloud.
- **Bluetooth:** Send the vCard via Bluetooth. See [“Bluetooth” on page 104](#) for information on pairing and sending via Bluetooth.
- **Drive:** Save the vCard to your Google Drive.

Messages

Send instant messages, media, and more with text and multimedia messages.


Text and multimedia messages

- With text messages (SMS), you can send and receive instant text messages.
- Multimedia messages (MMS) can contain text, photos, audio and video files, contact information cards (vCard), and more.

Note: See your service plan for applicable charges for messages.

Send a text message (SMS)

1. From the Home screen, tap **Messages** .
2. Tap .
3. Enter a contact name or mobile number in the **To** field.
 - Enter phone numbers, contact names, or email addresses directly in the **To** field. If you're sending the message to several contacts, separate the phone numbers with a comma. As you enter information, any matching phone numbers from your contacts list are displayed. Tap the matching contact to add them as a recipient.
 - Scroll to find and select the contacts to whom you want to send the message. You can also create contact groups as recipients.
4. Tap the text box and compose your message.

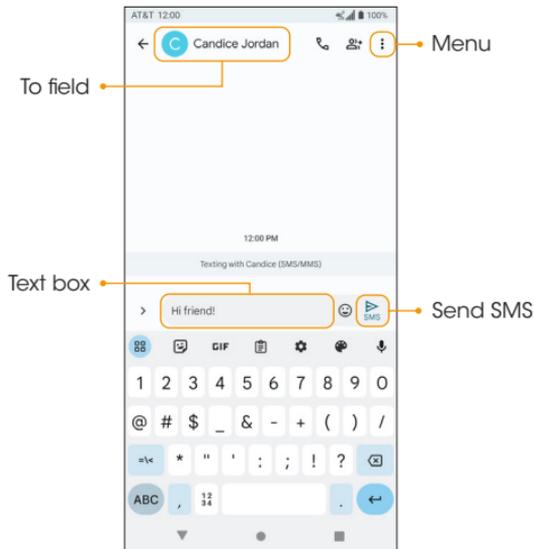


Note: Messages exceeding a limited amount of characters will be delivered as one message but may incur additional charges. A counter appears above **Send**  to tell you how many characters you have entered and how many characters are left.

5. When done, tap **Send**  to send the text message.

Note: Your text message automatically becomes a multimedia message if you enter an email address as the recipient, attach an item, or compose a very long message.

Send a multimedia message (MMS)

1. From the Home screen, tap **Messages** .
2. Tap .
3. Fill in one or more recipients. See ["Send a text message \(SMS\)" on page 86](#) for more information on entering recipients.
4. Tap the text box to compose your message.
5. Tap **Add**  to the left side of the text box to attach files.

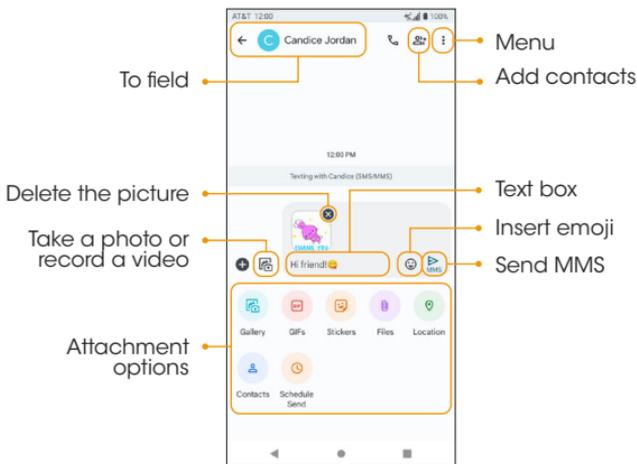

Note: Attachment options may vary.

6. After adding an attachment, you can tap to view it, and tap  to delete the attachment.

Attachment options

Item	Description
	Take a photo or record a video to send or select a saved photo or video files from Photos to send.
	Insert emoji.
	Add GIFs.
	Add stickers.
	Select one or more files from Files to send.
	Share your location.
	Share vCards.
	Schedule your message for another time. Tap it to choose the time you want to send the message. You can choose from among several preset times or tap Pick date and time and choose the exact time you like.

7. Tap **Send**  to send the MMS message.

Chat features


With RCS Chat features, you can send and receive messages over Wi-Fi or your data network, see when friends are typing or when they have read your message, share images and videos in high quality, and more.

Note: To use RCS Chat features, you and the recipients must have a service plan that supports RCS Chat and have RCS Chat capable devices with chat features turned on.

To enable RCS Chat features on your phone, follow the steps below:

1. From the Home screen, tap **Messages** .
2. Tap  > **Messages Settings** > **RCS chats**.
3. Slide the **Turn on RCS chats** switch to the **On**  position to enable it.


1:1 Chat

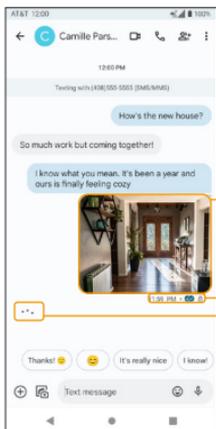

Share large files

View read receipts
Typing indicator

Group Chat

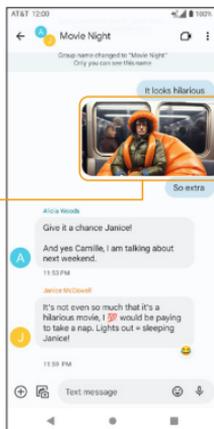

Messages settings

1. From the Home screen, tap **Messages** .
2. Tap  > **Messages Settings**.

RCS Chat features

- **Enable RCS chat features:** Slide the switch to the **On**  position to enable chat features.
- **Send read receipts:** Slide the switch to the **On**  position to let others to know when you have read their message.
- **Show typing indicators:** Slide the switch to the **On**  position to show your typing status to others.
- **Auto-download files you receive over mobile data:** Choose the maximum file size that can be automatically downloaded.
- **Learn more about chat features:** Get more information about chat features.

Notifications

Enable or disable notification icons when messages are received.

Bubbles

Enable or disable message bubbles by selecting **All conversations can bubble**, **Selected conversations can bubble**, or **Nothing can bubble**.

Hear outgoing message sounds

Slide the switch to the **On**  or **Off**  position to enable or disable sounds when sending messages.

Message organization

Slide the switch to the **On**  position to view messages sorted by category.

- Primary category view: Choose to prioritize Personal or Business category.
- Slide the switch to the **On**  position to auto-delete OTPs after 24 hours.

Your current country

Display your current country.

Suggestions

Slide the switch to the **On**  position to enable suggested smart replies, actions, stickers, as well as message and birthday reminders.

Automatic previews

Enable or disable automatic preview cards for links, places, and other content that the Messages app is able to recognize over time.

Spam protection

Enable or disable spam detection function and report to Google.

Swipe actions

Customize actions for swiping left and right.

Advanced

- **Group messaging:** Enable or disable the ability to send MMS messages to multiple recipients in a group.
- **Auto-download MMS:** Enable or disable the ability to automatically retrieve and download incoming MMS messages.
- **Use simple characters:** Slide the switch to the **On**  position to convert the text's special characters into a simple message.
- **Get SMS delivery reports:** Slide the switch to the **On**  position to get a report when an SMS message is delivered.

- **Show iPhone reactions as emoji:** Slide the switch to the **On**  position to enable.
- **Wireless emergency alerts:** View alert messages you've received.
- **SIM card messages:** View messages saved on your SIM card.
- **Phone number:** View your phone number.

Help improve Messages

Slide the switch to the **On**  position to allow smart features to learn over time.

About, terms & privacy

View more information about Message's current version, privacy policy, and terms of service.


Gmail

Use Gmail to send, receive, and manage your email messages. Before using Gmail, you must sign into your Google Account on your phone. See "[Google Account](#)" on page 44 for details on signing in or creating an account.

Note: You can use the Gmail app to manage email for other accounts, such as Yahoo!, Hotmail, Outlook, and more.

Create and send an email message

1. From the Home Screen, open the Google folder, tap **Gmail** .

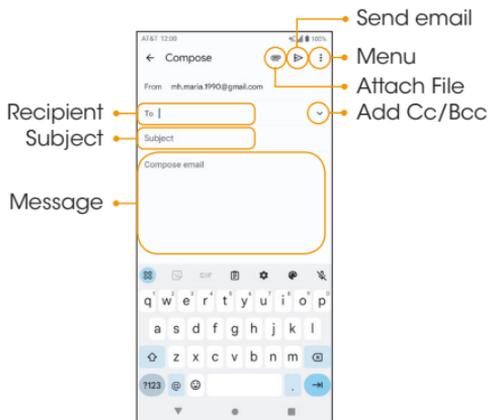

2. From the inbox, tap  **Compose** to compose a new email message.
3. Enter the message recipient(s), subject, and message, and then tap **Send** .

Email composition options

- **Add Cc/Bcc recipients:** In the mail composition window, tap  in the **To** bar to add Cc/Bcc recipients.
- **Attach photos or videos:** In the mail composition window, tap  > **Attach file**. Tap the file you want to attach.
- **Save as a draft (Send later):** While composing your message, tap **Menu**  > **Save draft** or press the **Back** button  to save as a draft.
- **Delete mail being composed:** While composing your message, tap **Menu**  > **Discard**.



Note: View your drafts and sent mail from the inbox by tapping **Menu**  > **Drafts**  or **Sent** .

Open an email message from a notification

When a new email is received, you will see **M** in the Status bar.

1. Swipe the Status bar down to display the Notification panel.
2. Tap the new message from the Notification panel.

If you have two or more new email messages, tapping the notification will open the Gmail app.

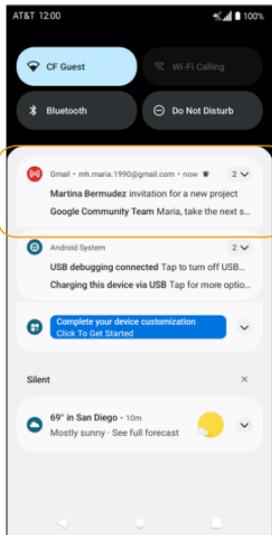
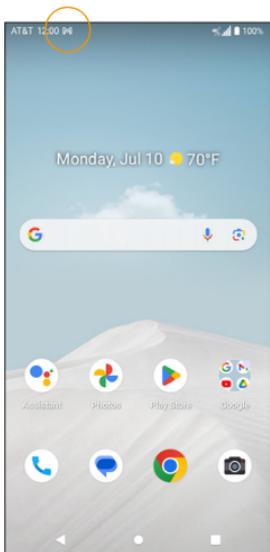


Email settings

You can access settings for the Gmail app and for your individual email accounts from the Gmail Settings menu.

1. From the Home Screen, open the Google folder, tap **Gmail** .
2. Tap **Menu**  > **Settings**.
3. Tap **General settings** to access settings for all accounts or tap an account name to configure settings for a specific email account.

Note: Available settings are subject to change.

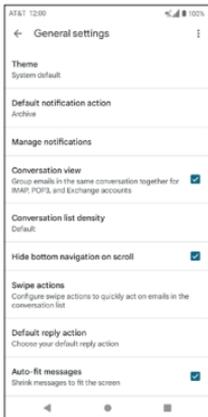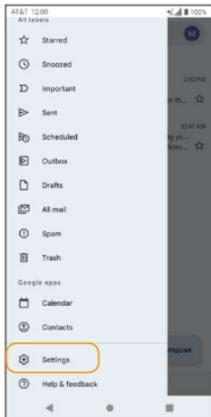

Internet and social networking

The following topics describe how to connect to and use the Internet on your phone and how to access popular social networking sites such as Facebook, Meet, and more.

Chrome browser

From the Home screen, tap **Chrome**  to browse the Internet, search for information, and bookmark your favorite web pages for convenient access.

Browsing web pages

1. Tap the address field.
2. Enter a web address or a keyword to browse for web pages.

Adding a bookmark

1. Open the web page you want to bookmark.
2. Tap **Menu**  > .

Opening a bookmark

1. From the Chrome browser screen, tap **Menu**  > **Bookmarks**.
2. Select the website you want to view.

Customizing browser settings

1. From the Chrome browser screen, tap **Menu**  > **Settings**.
2. In the Settings list, you can select options to customize the browser.

Tip: For more information, visit: google.com/intl/en/chrome/browser/mobile/.

Facebook

Post updates, see what your friends are up to, upload pictures and check-ins, and more with on-the-go Facebook access.

Sign in to your Facebook account or create a new account

1. From the Home screen, swipe up to access **Apps** and tap **Facebook** .
2. Enter your mobile number or email and password and tap **Log In**, or tap **Create New Facebook Account** to join Facebook.
3. Once completed, your Facebook account will be added to your phone.

Use Facebook

Once you've either created an account or signed in, you can post and view updates, upload pictures, tag locations, and more, all from your phone.

1. From the Home screen, swipe up to access **Apps** and tap **Facebook** .
2. Tap **What's on your mind?** to type an update. You can also share photos and videos, start a live video, scroll through your Facebook feed, and more.

Connectivity

The following topics address your phone's connectivity options, including USB file transfer, Wi-Fi, Bluetooth, and more.

Transfer files between your phone and a computer

You can use the USB cable to connect your phone directly to your computer and transfer music, photos, and other content files. For example, if you have a music album stored on your computer that you want to transfer to your phone, you can connect your phone to the computer and copy the files to the music folder.

File transfer tips

If you want to save data to an SD card on your phone, make sure the SD card is installed and active. For more information, see ["SD card" on page 173](#).


Important: Avoid removing the SD card while transferring data.

Data exchange may use the methods outlined in the following table:

Method	Description
File Transfer	Transfer files between your phone and PC such as photos, videos, and music.
PTP	Transfer photo and video files between your phone and PC.




Transfer files between the phone and a computer

1. Connect your phone to your computer using the USB charging cable.

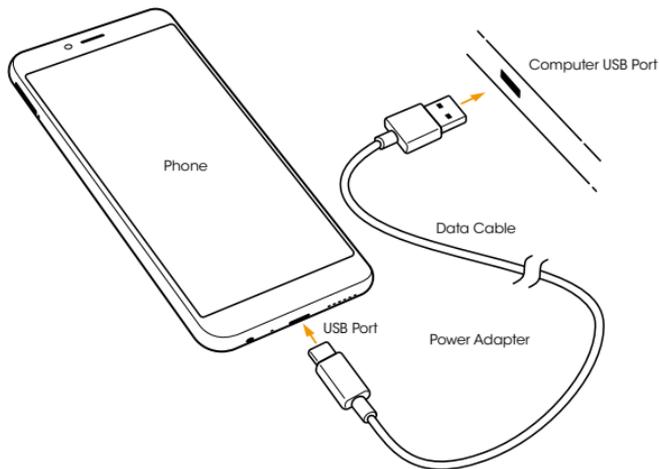

- Insert the end of the cable to the charger/accessory jack at the bottom of the phone.
 - Insert the USB end of the cable into an available USB port on your computer. You may need to remove the USB cable from the AC adapter to access it.
2. Drag the Status bar down to display the Notification panel. You will see **Charging this device via USB.**

3. To transfer files from your phone to your computer:
- From the Home screen, swipe up to access **Apps** and tap **Settings** .
 - Tap **Connected devices**  > **USB**.
 - Tap **File Transfer**. You can also select other options available.

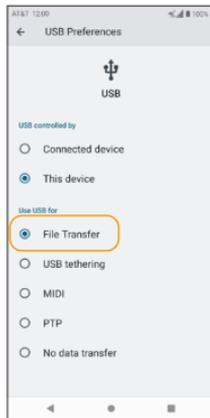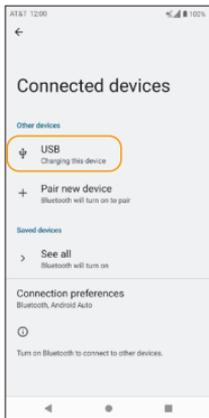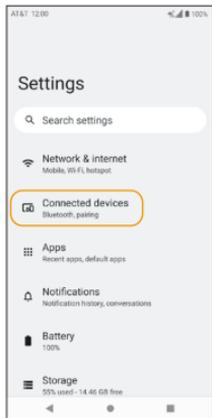

4. On your computer, navigate to the detected device (such as through the My Computer menu) and open it.
5. If available, select a drive (**Internal shared storage** or **SD card**).
6. Select a folder and copy files from your computer to your phone or from your phone to your computer.
7. When done, disconnect your phone from your computer.

Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to 300 feet. To use your phone's Wi-Fi, you need access to a wireless access point or hotspot.

Turn Wi-Fi on and connect to a wireless network

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Network & internet**  > **Internet**.
3. Slide the Wi-Fi switch to the **On**  position.
4. Wi-Fi is enabled. Tap **Wi-Fi** to see the names and security settings of in-range Wi-Fi networks.
5. To disable Wi-Fi, slide the Wi-Fi switch to the **Off**  position.
6. Tap a Wi-Fi network to connect, enter the password (if applicable), and then tap **CONNECT**.

Your phone will be connected to the Wi-Fi network. You will see  in the status bar. For more information on Wi-Fi see ["Wi-Fi" on page 148](#).

Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, Bluetooth-enabled handhelds, computers, printers, and wireless phones. The communication range for Bluetooth is approximately 30 feet.




The following table describes different options and functions available with certain Bluetooth accessories.

Function	Description
Audio output	Wirelessly listen to music, podcasts, etc.
Hands-free calls	Call hands-free, using Bluetooth-capable hands-free devices and headsets.
Data exchange	Exchange data with Bluetooth devices.

Enable Bluetooth

To enable Bluetooth

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Connected devices**  > **Connection preferences** > **Bluetooth**.
3. Slide the Bluetooth switch to the **On**  position.
 - You can also access Bluetooth from Quick Settings panel. Slide the Status bar down twice.
 - To disable Bluetooth, slide the Bluetooth switch to the **Off**  position.

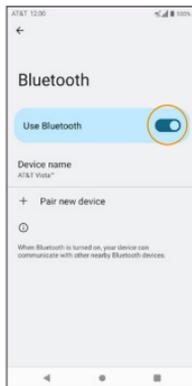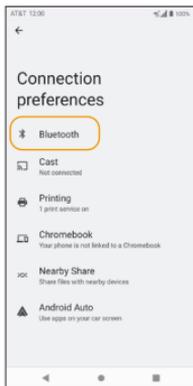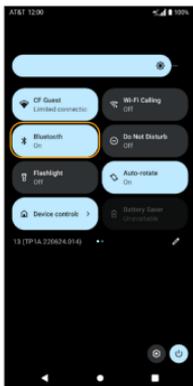


Note: Turning on Airplane mode disables all network features including calling, messages, mobile data, Wi-Fi, and Bluetooth. To continue to use Wi-Fi and Bluetooth, turn them on in Settings or in the notification panel.

Tip: Turn off Bluetooth when not in use to conserve battery power.

Pair Bluetooth devices

To pair Bluetooth devices


1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Connected devices**  > **Pair new device**.
 - Nearby devices will appear under **Available devices**.
 - If a target device is not detected, ensure that the device is powered on and is discoverable, then refresh to search again.

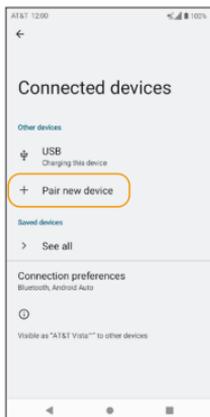

3. Tap a device under **Available devices** and follow the on-screen instructions to pair with the device.
 - Methods to accept a Bluetooth connection differ depending on the devices being used.


To forget a paired device

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Connected devices** .
3. Tap **Settings** next to the device you wish to forget.
4. Tap **FORGET > FORGET DEVICE**.
 - The device will be unpaired from your phone. To reconnect with the device, you will need to pair again.

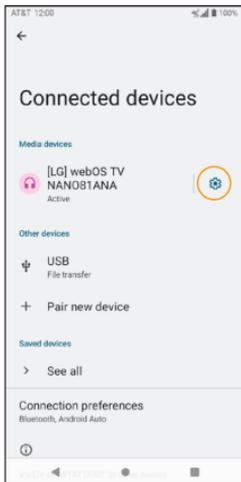

Connect to a paired Bluetooth device

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Connected devices** .
3. Tap a paired device to connect.

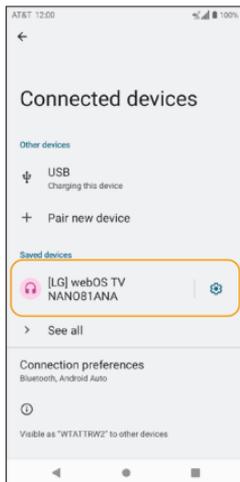

When the device is connected to your phone, you can then use the headset or car kit to listen to music or make and receive phone calls.

Note: Noise may be experienced with wireless calls and hands-free calls. Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth-compatible devices.

Send information via Bluetooth

You can use Bluetooth to transfer files between your phone and another Bluetooth-enabled device, such as a phone or computer. Send photos, videos, calendar events, contacts, and more.

See [“Share pictures and videos” on page 123](#) and [“Share a contact” on page 84](#).

Receive information via Bluetooth

1. When another device attempts to send a file to your phone via Bluetooth, you will see a request to accept the file.
2. Tap **ACCEPT** to receive the file.
 - When your phone receives a file, you will see a notification. To download the file immediately, drag the Status bar down to display the Notification panel, and then tap the notification. Select the file you wish to open from the Inbound transfers menu.
 - Media files and documents are usually opened directly in a compatible app. For example, if you received and opened a photo, it will open in the **Photos**  app.
 - For a Calendar file, select the calendar where you want to save the event, and then tap **Import**. The Calendar is added to your Calendar events. For more information on using the Calendar, see [“Calendar” on page 124](#).
 - For a vCard contact file, if there are multiple vCard files on your storage card, you can choose to import one, several, or all of those contacts to your contacts list.

Tip: For more information on Bluetooth, see [“Bluetooth” on page 158](#).



Apps and entertainment


The topics in this section will explore the features that make your phone so much more than a phone, from the camera and productivity apps to music, entertainment, and more.

Camera

You can use the Camera to take portraits, photos and videos, and translate texts.

Camera overview

The camera's viewfinder screen lets you view your subject and access camera controls and options.

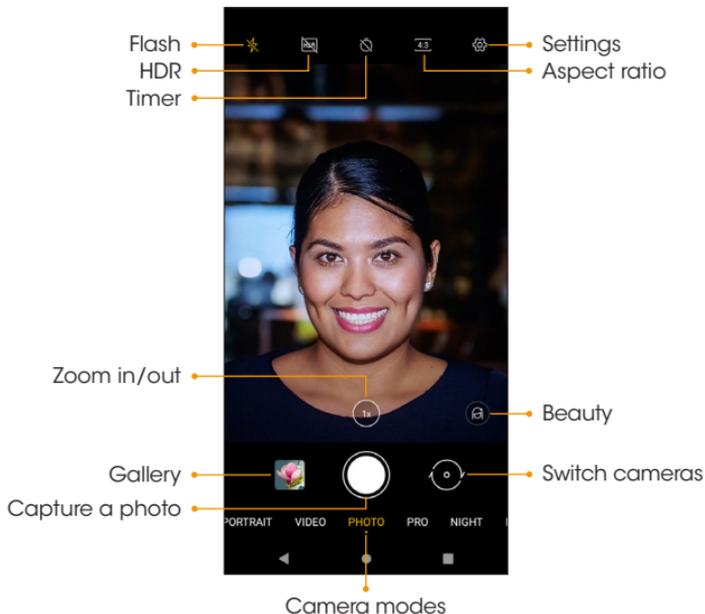

Icon		Function/Service
	Settings	Select camera modes and settings options.
	Timer	Choose from none, three or ten second capture delay.
	Aspect Ratio	Choose between 4:3, 1:1, or 18:9.
	HDR enhance	Activate or deactivate High Dynamic Range enhance mode for clearer, more vivid photos.
	Flash	Activate or deactivate the camera flash.
	Zoom in/out	Drag the bar to zoom in or out on the screen.
	Switch cameras	Switch between the front and back cameras.
	Capture	Capture a photo.
	Gallery	View the last photo or video taken.
	Beauty	Adjust the slider to control skintone, smoothness, jawline, and eyes.

Feature	Function/Service
Scan QR code	Scan a code and display the relevant information.
Portrait mode	Focuses on a face and blurs the background for a professional looking portrait.
Video mode	Record videos and access video settings.
Photo mode	Capture photos and access camera settings.
Pro mode	Manually adjust settings like the shutter speed, ISO, and white balance.
Night mode	Automatically enhances the brightness of the photo.
Panorama mode	Pan the camera from left to right or vice versa to capture a continuous view of the surrounding area.
Translate mode	Position the text to be translated in the viewfinder to translate.

Note: Camera options vary based on mode, camera in use, etc.

Camera cautions



If the lens is dirty: Fingerprints and smudges on the camera lens may result in blurry photos or videos. If this happens, wipe the lens with a soft, dry cloth.

Avoid exposure to direct sunlight: Do not expose the lens to direct sunlight for long periods, as this can affect the color filter and distort the color of photos and videos.


Take a photo

Note: If you have an SD card installed, set up, and formatted, photos and videos will automatically be saved to the SD card. See [*"First Time Setup after Inserting an SD Card" on page 18*](#) for more details. If no card is installed, photos and videos will be saved to your phone's memory.

1. From the Home screen, tap **Camera** . You can also access the Camera with one of the following methods:
 - From the Home screen, swipe up to access **Apps** and tap **Camera** .
 - Press the **Power/Lock** key twice quickly.
2. Aim the camera at your subject and tap  or press either **Volume** key to take the photo.

Record a video

1. From the Home screen, tap **Camera** .
2. Tap **Video** to switch to Video mode.
3. Aim the camera at your subject and tap  or press the **Volume** key to start recording a video.
4. Tap  again to stop recording and save your video.

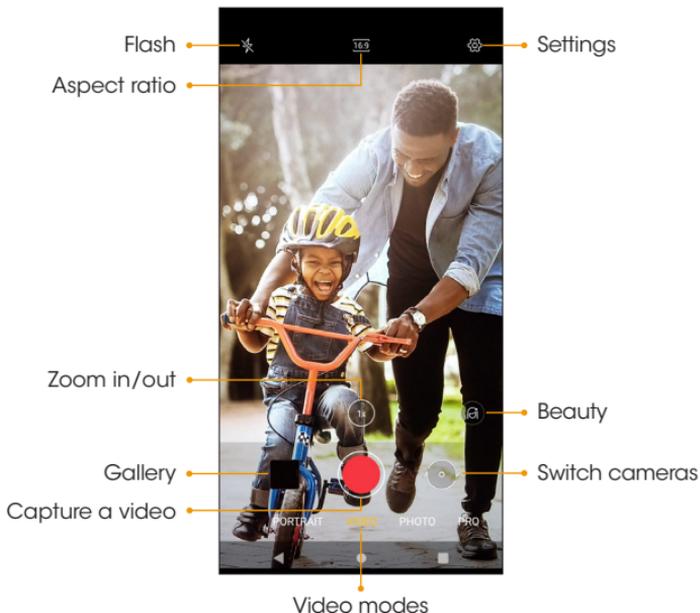

Take a portrait

1. From the Camera screen, tap **Portrait** to switch to Portrait mode.
2. Position the subject's face in the viewfinder and adjust the level of background blur.
3. Tap  to take the portrait.

Portrait mode focuses on the face and blurs out the background.

Translate written words

1. From the Camera screen, scroll to Google Lens and tap **Translate** to switch to Translate mode.
2. Point your camera at words you don't understand to translate them.
3. Tap  to translate the written words.

Scan a QR Code


Your phone's rear camera has a build-in QR code reader that will automatically scan codes for restaurant menus, calendar events, Wi-Fi networks, etc.

1. Aim your camera at the QR code you want to scan.
2. Your phone will recognize the code and display the relevant information. Usually, a notification will appear at the bottom of the screen, then tap it to trigger the code's action.

Camera settings

You can adjust your camera's settings using the icons on the main camera screen and the full camera settings menu.

1. From the Home screen, tap **Camera** .
2. Tap **Settings**  on the top right corner of the Camera screen.

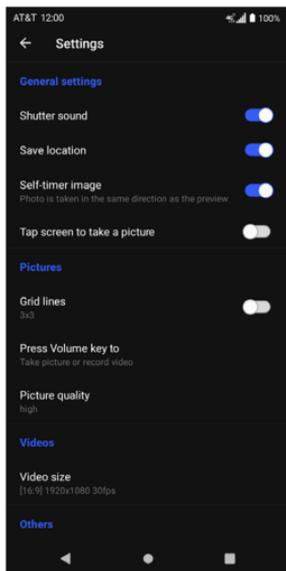

Function	Description
Shutter sound	Toggle On or Off to hear shutter sound when taking a photo.
Save location	Toggle On or Off to include location information with capture.
Self-timer image	Toggle On to take photo in the same direction as the preview.
Tap screen to take a picture	Toggle On or Off to enable.
Grid lines	Toggle On to enable 3x3 grid lines during capture.
Press Volume key to	Set Volume key to take picture and record video or to zoom, or set as Off.
Picture quality	Choose between high, medium, or low.
Video size	Choose resolution: 1920x1080, 1080x1080, or 1440x720.
Reset settings	Reset all camera settings to default.

Photos


Using the **Photos**  app, you can view photos and watch videos that you've taken, downloaded, or copied onto your storage card or phone memory. For pictures that are on your storage card or phone memory, you can do basic editing such as rotating and cropping. You can easily assign contact photos or wallpapers and share photos with your friends.

View photos and videos

1. From the Home screen, tap **Photos** .

Tip: You can also access **Photos**  by swiping up on the Home screen to access **Apps** and tapping **Photos** .


2. Tap an image or a video to view.

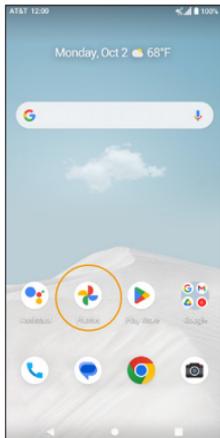

Options while reviewing photos or videos

Zoom in or out on a photo or video

Tap the screen twice or pinch the screen to zoom in or out on a photo or video.

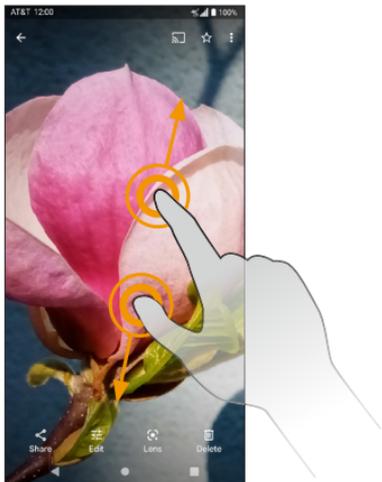

Viewing videos

Use the on-screen controls to play, pause, or stop video playback.

Edit photos

Rotate and save a photo

1. From the Home screen, tap **Photos** .
2. Tap the photo you want to rotate.
3. Tap **Edit**  to access the Edit screen.
4. Tap **Crop** and adjust the slider to rotate the photo.
5. Tap **Save copy** to save a copy of your photo.



Crop a picture

1. From the Home screen, tap **Photos** .
2. Tap the photo you want to crop.
3. Tap **Edit**  to access the Edit screen.
4. Tap **Crop**. A crop box appears on the photo.
5. To adjust the crop box size, drag the corners inward or outward to resize the crop box.
6. Tap **Save copy** to apply the changes to the photo and save.

The cropped photo is saved in the album as a copy. The original photo will remain unedited.




Share pictures and videos

The **Photos**  app allows you to send photos and videos using email or MMS messages. You can share photos and videos on your social networks or send them to another phone or your computer via Bluetooth.

1. From the Home screen, tap **Photos** .
2. Tap the photos or videos you want to share.

Tip: To select multiple items, touch and hold an image to turn on Multiselect mode. Tap to select the items you want to share.

3. Tap **Share** , then select to share using Bluetooth, Gmail, Meet, Messages, and more. Follow the on-screen prompts to send the photo or video.

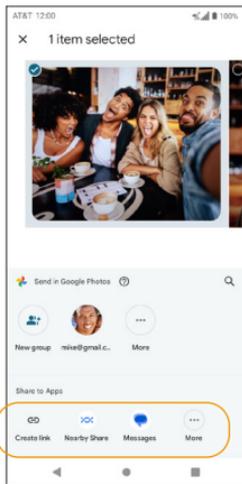

Productivity

Use your phone to stay productive and organized with calendar, navigation, alarm, office, and more productivity apps.


Calendar

Use the **Calendar**  to create and manage events, meetings, and appointments. Your Calendar helps organize your time and reminds you of important events.

In order to sync with your Google calendar, you must sign in to a Google Account on your phone. See ["Google Account" on page 44](#) for more information on signing in or creating a Google Account.

Calendar view

1. From the Home screen, swipe up to access **Apps** and tap **Calendar** .

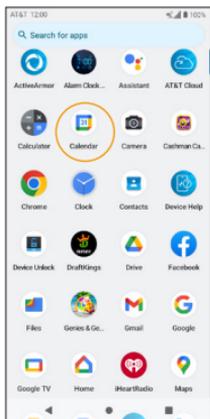

2. Tap **Menu** ☰.


3. Select from one of the following calendar views:

- **Schedule:** Display all events.
- **Day:** Display today's schedule by hour. Slide the screen to the left and right to display the previous and the next day, respectively.
- **3 days:** Display the previous day, today, and the next day. Slide the screen to the left and right to view the previous and next three days.
- **Week:** Display the current week. Slide the screen to the left and right to view the previous and next week, respectively.
- **Month:** Display the current month. Slide the screen to the left and right to view the previous and next month, respectively.

Schedule View



Day View

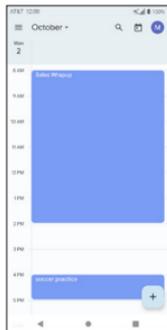


3 Day View



Week View





Month View

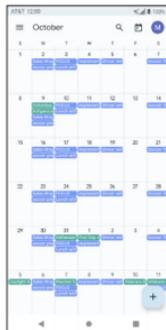


Add an event

1. From the Home screen, swipe up to access **Apps** and tap **Calendar** .
2. Tap **Add**  to add an event.
3. Set the event details, such as title, time, location, people to join in, notification, and more.
4. When finished, tap **Save**.

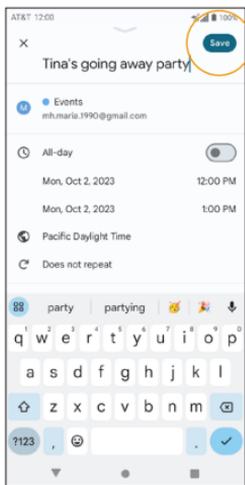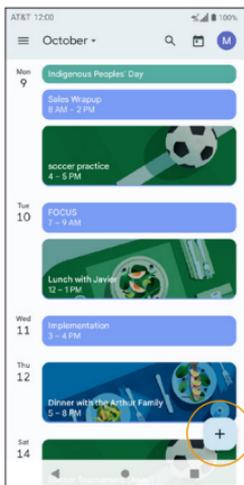

View calendar events

1. From the Home screen, swipe up to access **Apps** and tap **Calendar** .
2. Tap a date and an event to view the details.

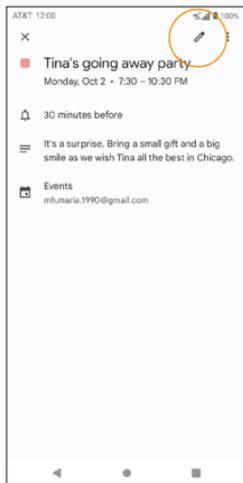

Edit an event

1. From the Home screen, swipe up to access **Apps** and tap **Calendar** .
2. Tap a date and an event to view the details.
3. Tap **Edit**  to edit the event.
4. When you are done editing, tap **Save**.

Delete an event

1. From the Home screen, swipe up to access **Apps** and tap **Calendar** .
2. Tap a date and an event to view the details.
3. Tap **Menu**  > **Delete** to delete the event.

Calendar settings

1. From the Home screen, swipe up to access **Apps** and tap **Calendar** .
2. Tap **Menu**  > **Settings** > **General**.
3. Tap an option to adjust Calendar settings.

Google Maps

Use the Google Maps app to determine your location, get directions, browse local businesses and attractions, rate and review places, and more.


Enable location services on your phone

Before using Google Maps, you must enable your phone's location feature. For information about setting your phone's location options, see ["Location" on page 195](#).

Search for destinations

Use Google Maps to locate and map a specific address or destination.

1. From the Home screen, swipe up to access **Apps** and tap **Maps** . You can also access Maps from the Google folder on the Home screen. If prompted, follow the on-screen instructions to accept terms of use.

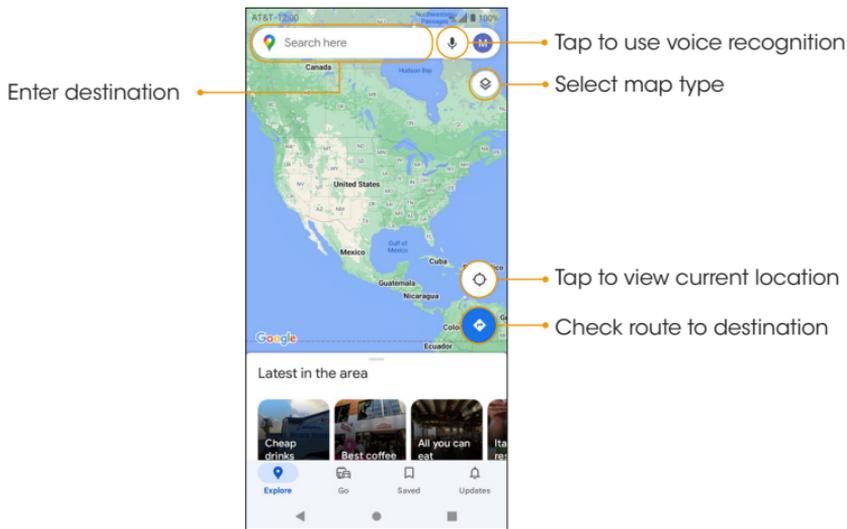

2. Tap **Search here**.
3. Enter an address, city, facility name, etc., then choose a search result. You will see your location on the map.

Google Maps operations

- **View current location:** Tap  to find your current location on the map.
- **Explore nearby venue categories:** Browse nearby venues by selecting a category such as restaurants, parks, hotels, and more.
- **Select map types for different views:** Tap **Map Type**  and choose your map view, or select to view map details such as traffic, street view, etc.


- **Find a route to your destination:** Tap **Go** , enter your desired start location and destination, and tap a method of transportation (car, public transit, or on foot) for a list of step-by-step directions to your destination.

Google Search

Search for information saved on the phone, in apps, and on the Internet.

Use Google Search


1. From the Home screen, tap the Google Search widget. You can also access Google Search by swiping up on the Home screen to access **Apps** and tapping **Google** .
2. Type your search keywords and tap **Search** . To search by voice, tap **Google Voice Search**  in the search bar and say your search terms.

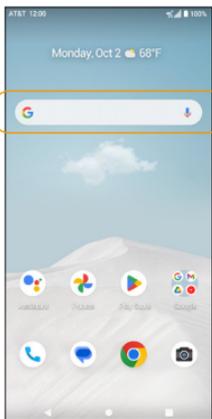

Use Google Voice Search

Tip: To quickly access Google Voice Search from any screen, press and hold **Home**.


1. From the Home screen, swipe up to access **Apps** and tap **Google**.
2. Tap **Google Voice Search**.
3. Say your search terms and search results will appear.

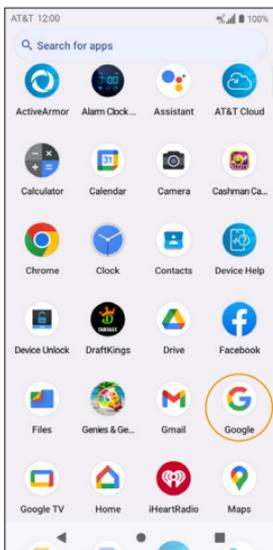

Calculator

Your phone's convenient built-in calculator lets you perform basic and advanced mathematical equations.




1. From the Home screen, swipe up to access **Apps** and tap **Calculator** .

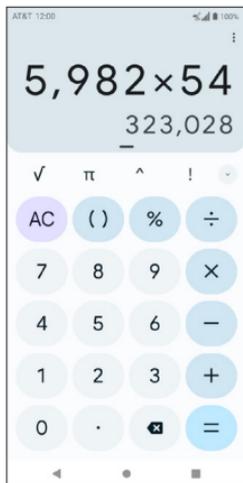

2. Enter the first number.
3. Tap a mathematical function key, then enter the second number.
4. Tap $=$ to view the result.
5. Tap **AC** to clear the results.

View calculator history

1. From the Home screen, swipe up to access **Apps** and tap **Calculator** .
2. Tap **Menu**  > **History**, or drag down on the **History**  bar to view the calculator history.
3. To clear the calculator history, tap **Menu**  > **History** > **Menu**  > **Clear**.
4. To return to the calculator, drag the **History**  bar back up or tap the **Back** button .

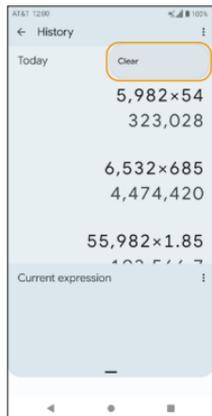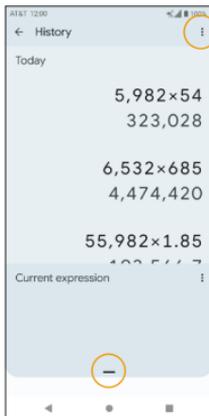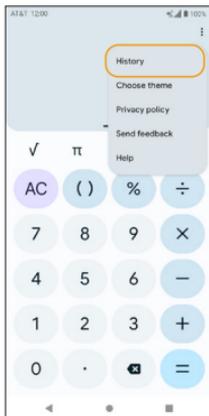



Clock

The Clock app allows you to set alarms, view different world times, use a stopwatch, set a timer, manage your bedtime, and use your phone as a desk clock.

Set the date and time manually

Your phone uses the wireless network to receive the current date and time automatically. You can also set the date and time manually.



1. From the Home screen, swipe up to access **Apps** and tap **Clock** .

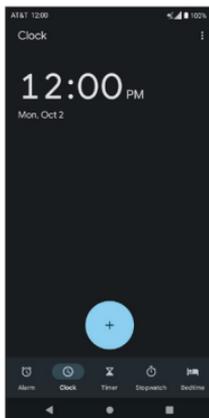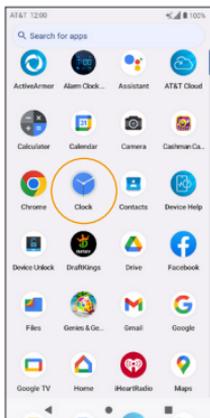

2. Tap **Menu**  > **Settings** > **Change date & time** > **Set time automatically** > **Off**.
3. Set the date and time manually.

Create a new alarm

1. From the Home screen, swipe up to access **Apps** and tap **Clock** .
2. Tap **Alarm** .
3. Tap .
4. Set the time for the alarm and tap **OK**. You can also tap  to enter the time directly.
5. Set more alarm details, if desired.

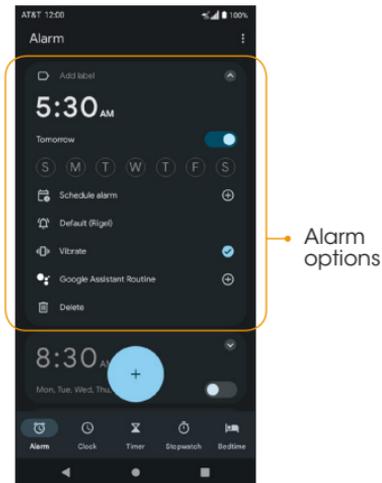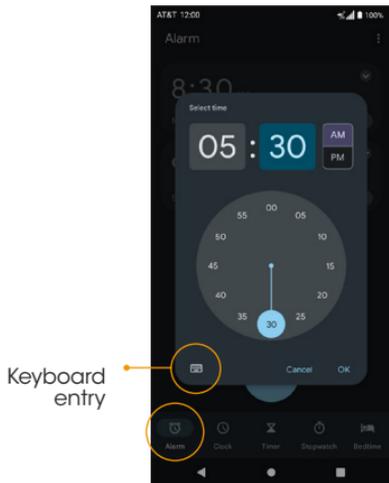


Feature	Description
Add label	Enter a name for the alarm.
Repeat	Select the days to repeat the alarm.
Schedule alarm	Choose to set the alarm for a particular calendar date.
Alarm sound	Select a sound to play for the alarm.
Vibrate	Activate alarm vibration.
Google Assistant routines	Set up for routine activities facilitated by the Google Assistant after the alarm is dismissed.
Delete	Delete the current alarm.

Turn an alarm off

1. To turn an alarm off, drag the **Alarm Clock**  to **Stop** on the lock screen.
2. To snooze the alarm for 10 minutes, drag the **Alarm Clock**  to **Snooze** on the lock screen.

Note: On the home screen, a pop up will appear at the top of the screen. Tap **SNOOZE** to snooze or tap **STOP** to stop the alarm.

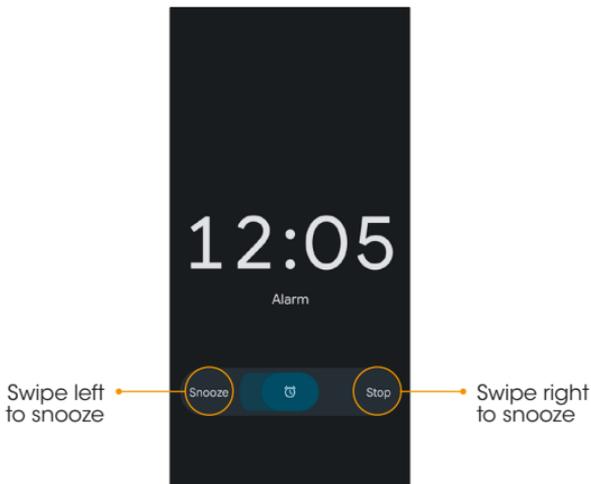




Delete an alarm

1. From the Home screen, swipe up to access **Apps** and tap **Clock** .
2. Tap the alarm you want to delete from the alarm list.
3. Tap **Delete**.

World clock




The World clock lets you keep track of the current time in multiple cities around the globe.

1. From the Home screen, swipe up to access **Apps** and tap **Clock** .
2. Tap **Clock**  if not already selected. Tap  to access the World clock screen.
3. Type to enter a city name and select the city you want to add from the list.
 - To remove a city, swipe the city to the left or right.

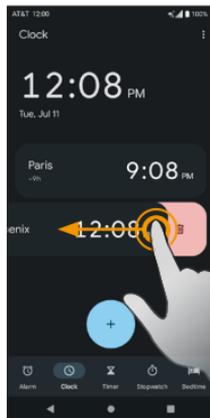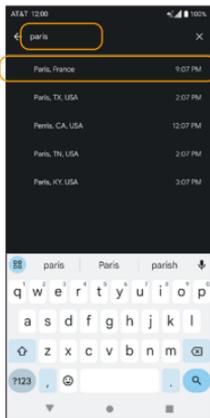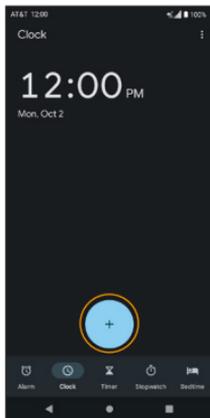



Timer

1. From the Home screen, swipe up to access **Apps** and tap **Clock** .
2. Tap **Timer**  to access the Timer screen.
3. Enter the amount of time into the Timer.
4. Tap  to begin timing.
5. Tap  to pause timing.
 - Tap  again to resume timing.
 - Tap  to reset the timer back to the original time entered.
 - Tap  to delete the timer.
 - Tap  to add a minute to the original time entered.
 - Tap  to add another timer. Swipe up and down to view other active timers.

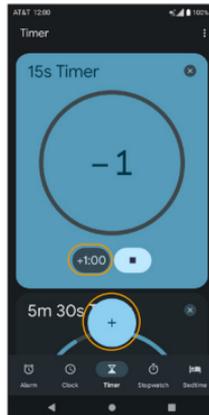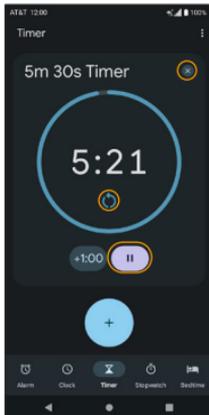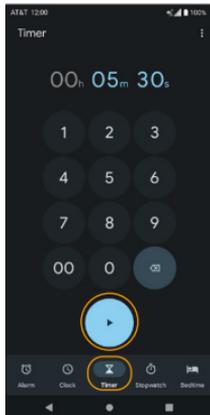

Stopwatch

1. From the Home screen, swipe up to access **Apps** and tap **Clock** .
2. Tap **Stopwatch**  to access the Stopwatch screen.
3. Tap  to begin the stopwatch.
4. Tap  to stop the stopwatch.
 - Tap  again to resume timing.
 - Tap  to reset the stopwatch to zero.
 - Tap  to add lap splits.

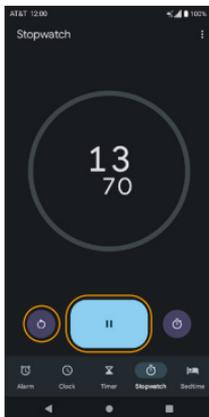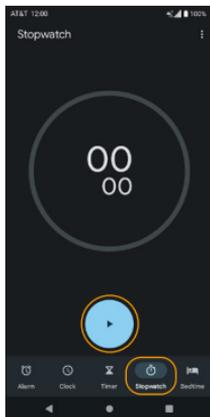

Bedtime

1. From the Home screen, swipe up to access **Apps** and tap **Clock** .
2. Tap **Bedtime**  to access the Bedtime screen.
3. Set your sleep time and wake-up time.


Your phone will enter **Bedtime mode** during the sleep time. In Bedtime mode, phone notifications for calls, texts, and other interruptions will be turned off. And the phone's display color will be turned into black and white to reduce the chance of you staying up and using your phone.

A wake-up alarm will be set automatically to wake you up at the wake-up time you've set.

There are the following options for you to manage your sleep:

- **See recent bedtime activity**
Keep track of your screen time and see estimates of time spent in bed. This is based on when your phone remained motionless in a dark room.
- **Listen to sleep sounds**
You can play soothing music to help you fall asleep. Sleep sounds don't play automatically.
- **See your upcoming events**
To make sure your alarm is set before any events, allow **Clock** to access your calendar.

Note: You can add **Bedtime mode** to the Quick Settings Panel to enable or disable this mode quickly and easily.

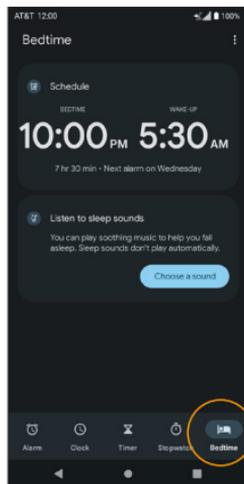

Entertainment and activities

The following topics provide an overview of your phone's entertainment apps.

YouTube

View videos uploaded to YouTube and upload your own videos.

View YouTube videos

Note: You can use the YouTube app to view videos on YouTube even if you aren't signed in to a YouTube account.

1. From the Home screen, swipe up to access **Apps** and tap **YouTube** .

Note: You can also access YouTube from the Google folder on the Home screen.



- If you are prompted to provide confirmation to use the on-screen instructions to continue.

2. Browse YouTube channels and tap a video to view.
3. The video will play on your phone screen. Tap the screen to pause or resume play while watching.



Post a video to YouTube


You can post videos to your YouTube account from your phone. Before posting, you must set up a YouTube account and sign in on your phone.

1. From the Home screen, swipe up to access **Apps** and tap **YouTube** .
2. Tap **Record/Post Video**  > **Upload a video**.

Note: You may be prompted to allow access to your photos, camera, and microphone. Tap **ALLOW ACCESS** to continue.

3. Select a video to upload, record a new video to upload, or stream a live video. Enter a title, description, and tags, and select a privacy setting.

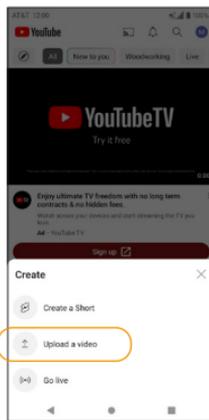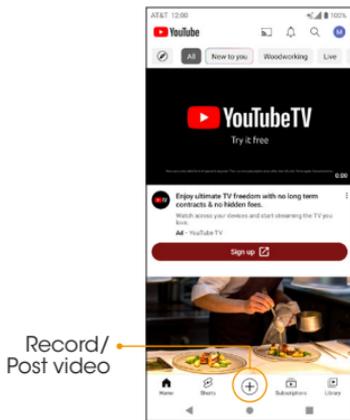

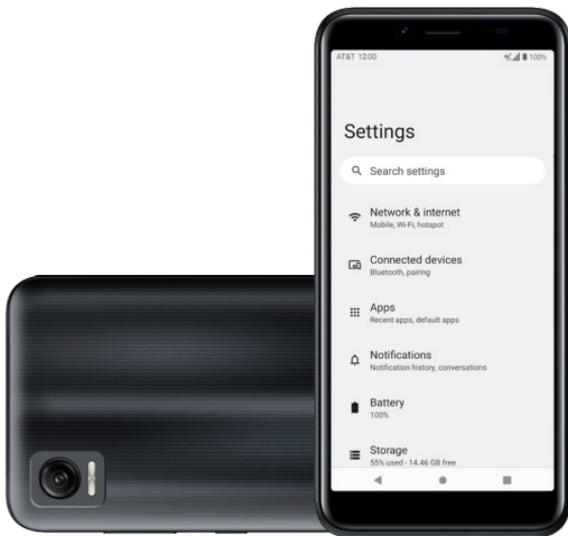

Settings

The topics in this section will cover your phone's settings and options.

Basic settings

From the Home screen, swipe up to access **Apps** and tap **Settings**  to access your phone's Settings menu. You can also access the Settings menu from the Status bar. Swipe the Status bar down twice and tap **Settings** .

The table below outlines the Settings categories.

	Category	Description
	Network & internet	Set Wi-Fi, mobile network, Airplane mode, Hotspot, VPN, Data Saver, etc.
	Connected devices	Manage the settings on devices connected by Bluetooth, Cast, USB, etc.
	Apps	View your recently opened apps, adjust the settings on default apps, permissions, etc.
	Notifications	Manage the settings on notifications.
	Battery	Monitor your phone's battery usage.
	Storage	Manage internal storage on your phone and provide menu choices for an optional SD card (not included).

	Category	Description
	Sound & vibration	Set ringtone, operation tones, etc.
	Display	Set brightness, font size, etc.
	Wallpaper & style	Change wallpaper, basic colors, and themes.
	Accessibility	Set accessibility options such as screen magnification, audio adjustment, etc.
	Security	Set a screen lock method, manage other security settings, etc.
	Privacy	Manage apps permissions, set your account activity and personal data, etc.
	Location	View and manage apps using your location.
	Safety & emergency	Add your medical information and emergency contacts, enable Emergency SOS and Emergency Location services, etc.
	Passwords & accounts	Manage all your email, social networking, and picture and video sharing accounts.

	Category	Description
	Digital Wellbeing & parental controls	Statistics, screen usage time, app timers, bedtime schedules, manage notifications, etc.
	Google	Check and set Google service options.
	System	Set language and time, manage reset options, enable backup, and view more important information about your phone.
	About phone	View information about your device.
	AT&T Software Update	Manage software updates for your phone.



Network & internet

Manage network and connectivity settings.

Wi-Fi

Connect your device to a Wi-Fi network

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Network & internet**  **> Internet**.

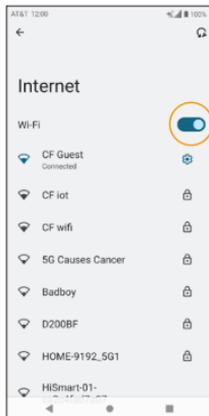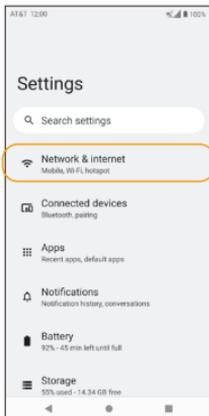


3. Slide the **Wi-Fi** switch to the **On**  position to turn it on.

Your phone will automatically search for available networks and you will be able to see the names and security settings of in-range Wi-Fi networks.

- To disable Wi-Fi, slide the **Wi-Fi** switch to the **Off**  position.

4. Tap the Wi-Fi network you want to connect to, enter the password (if applicable), and tap **CONNECT**. Your phone will be connected to the selected Wi-Fi network.


Wi-Fi Password

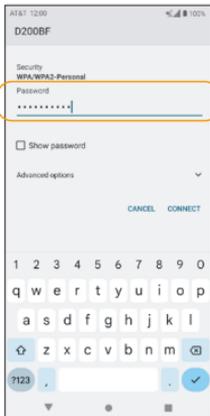

- The password for a household wireless LAN router is sometimes found on a sticker on the router (WEP, WPA, KEY, etc.) or QR code. Contact the router manufacturer for information. For the password for a public wireless LAN, check with user's service provider.
- Entering a password is not required if an access point is not security protected.

Manually connect to a Wi-Fi network

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Network & internet**  > **Internet**.
3. Slide the **Use Wi-Fi** switch to the **On**  position to turn it on.
4. Tap **Add network**.
5. Enter the required information and tap **SAVE** to continue.

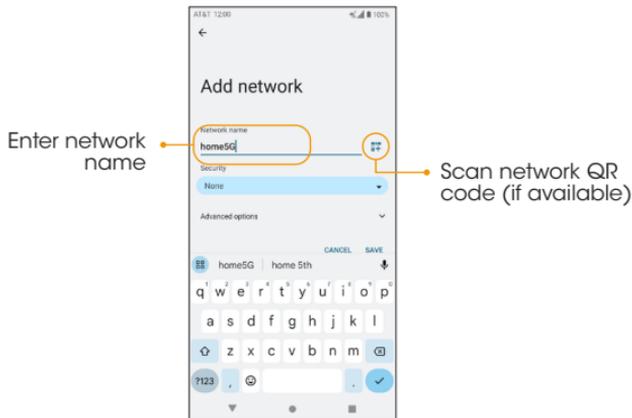

- **Network name:** Enter the network name.
- **Security:** Select a security option and enter your password.
- **Advanced options:** Show advanced options, such as IP settings and Proxy settings.

Network preferences

Create and manage wireless access points.

- **Turn on Wi-Fi automatically:** Wi-Fi will be turned on automatically when you are near high-quality saved networks, like your home network.
- **Notify for public networks:** Receive notifications about open networks when Wi-Fi is turned on.
- **Passpoint:** Enable or disable the function of seamlessly connecting to Passpoint™ enabled Wi-Fi access points without needing a password.
- **Install certificates:** Allow authentication to access files.
- **Wi-Fi Direct:** Connect to devices with Wi-Fi Direct.

Saved networks

Tap to view your saved Wi-Fi networks.

Non-carrier Data Usage

Tap to view the Wi-Fi data used by each app.

Wi-Fi Calling

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Network & internet**  > **Wi-Fi Calling**.
3. Slide the switch to the **On**  position to enable **Wi-Fi Calling**.

Note: To use Wi-Fi Calling, you will need to set up an Emergency Address. When the Emergency Address is successfully set, you will see the Wi-Fi Calling icon  in the Status bar.

- **About Wi-Fi Calling:** Tap to view more information about Wi-Fi Calling.

- **Network preference:** Select the preferred network.
- **Emergency Address:** Update your emergency address. This address will be used by Emergency services as your location if you make an emergency call (911) over Wi-Fi from this phone within the U.S.

Note: You must have an active Wi-Fi connection to send or receive calls and messages with Wi-Fi Calling.

Mobile network

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Network & internet**  > **Mobile network**.
 - **Mobile Data:** Slide the switch to the **On**  position to enable data access on your mobile network.
 - **International Data Roaming:** Slide the switch to the **On**  position to enable international data roaming.
 - **App data usage:** View the mobile data usage of each app.
 - **Data warning & limit:** View the following data management options:
 - **Mobile data usage cycle:** Set the date the data usage cycle resets.
 - **Set data warning:** Slide the switch to the **On**  position to enable alerts when your mobile data usage reaches the amount set.
 - **Data warning:** Set the data usage amount. Your phone will notify you when it reaches the amount set. Data usage measured by your phone is an approximate amount, and it may differ from the actual amount.
 - **Set data limit:** Slide the switch to the **On**  position to enable data limits.
 - **Data limit:** Set a data limit. Your phone will turn off mobile data when it reaches the limit set.

- **Advanced:**
 - **Access Point Names:** Select or add APNs.
 - **Mobile Network Diagnostics:** Slide the switch to the **On**  position to enable sending diagnostic data automatically to the provider to improve service.

Airplane mode

Disable all network communication.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Network & internet**  > **Airplane mode**.
3. Slide the switch to the **On**  position to activate Airplane mode. You can directly enable or disable Airplane mode via Quick Settings Panel.

Hotspot & tethering

Share your phone's internet connection with other devices.

Note: Using your phone as a mobile hotspot increases battery consumption and data usage.

Mobile hotspot

Use your phone as a Mobile hotspot.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Network & internet**  > **Hotspot & tethering** > **Mobile Hotspot**.
3. Slide the switch to the **On**  position to activate the mobile hotspot.
 - **Hotspot name:** Set the hotspot name.
 - **Broadcast network name:** Toggle **On**  or **Off** .
 - **Security:** Turn hotspot security on or off.

- **Hotspot password:** Tap to set a hotspot password.
- **AP band:** Select Access Point band, 2.4 GHz or 5GHz.
- **Maximum connections:** Tap to set the maximum number of users allowed to connect to the hotspot.
- **Select channel:** Choose between auto or channels 36, 40, 44, 48, 149, 153, 157, 161, 165.
- **Turn off hotspot automatically:** Slide the switch to the **On**  position to turn off the hotspot automatically if no devices are connected.
- **Extend compatibility:** Slide the switch to the **On**  position to help other devices find this hotspot and reduce hotspot connection speed.

USB tethering

Share your phone's internet connection via USB.

1. Connect your phone to the device that you want to share your internet with using a Type-C USB cable before continuing to the next step.
2. From the Home screen, swipe up to access **Apps** and tap **Settings** .
3. Tap **Network & internet**  > **Hotspot & tethering** > **USB tethering**.
4. Slide the **USB tethering** switch to the **On**  position to enable USB tethering.

Bluetooth tethering

Share your phone's internet connection via Bluetooth.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Network & internet**  > **Hotspot & tethering** > **Bluetooth tethering**.
3. Slide the **Bluetooth tethering** switch to the **On**  position to enable Bluetooth tethering.

Ethernet tethering

Share the phone's internet connection via Ethernet.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Network & internet**  > **Hotspot & tethering** > **Ethernet tethering**.

Note: An Ethernet cable must be plugged into the USB port for Ethernet tethering option to become active.

3. Slide the **Ethernet tethering** switch to the **On**  position to enable Ethernet tethering.

Data Saver

To help reduce data usage, Data Saver prevents some apps from sending or receiving data in the background.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Network & internet**  > **Data Saver**.
 - **Use Data Saver:** Slide the **Use Data Saver** switch to the **On**  position to enable the data saving feature.
 - **Unrestricted data:** Set apps to be allowed to use restricted data when Data saver is on.

VPN (Virtual Private Networks)

Note: You need to set a screen lock PIN or password before you can use a VPN.

Add a VPN profile

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Network & internet**  > **VPN**.

3. Tap **Add VPN**  on the top right corner of the VPN screen to add a VPN profile.
4. Follow the prompts to set up a VPN.

Edit and delete a VPN

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Network & internet**  > **VPN**.
3. Tap  next to a VPN.
4. Edit the VPN and tap **SAVE**, or tap **FORGET** to delete the VPN.

Connect to a VPN

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Network & internet**  > **VPN**.
3. Tap a VPN, enter your login information, and tap **CONNECT**.
 - To disconnect, tap the VPN, and tap **DISCONNECT**.

Private DNS

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Network & internet**  > **Private DNS**.
3. Select your Private DNS mode.




Connected devices

Manage settings for connected devices.

USB

Connect your phone to a computer using a USB cable to transfer data, share network connectivity, or charge your phone.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Connected devices**  > **USB**.

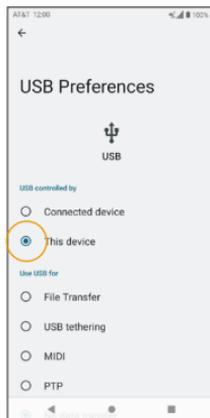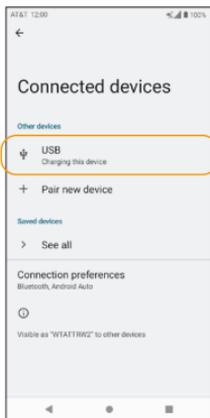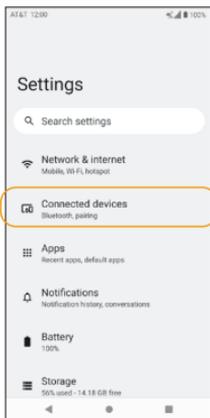

- **USB controlled by:**
 - **Connected device:** Set the connected device to control the USB.
 - **This device:** Set your phone to control the USB.

- **Use USB for:**
 - **File Transfer:** Select to transfer files between your phone and your computer.
 - **USB tethering:** Select to set the USB tethering mode.
 - **MIDI:** Select to set this device as MIDI.
 - **PTP:** Select to transfer PTP photos.
 - **No data transfer:** Select to set No data transfer mode.

Connection preferences

Manage various connection preferences.

Bluetooth

Wirelessly hear calls, connect speakers, transfer data, and more.

Activate Bluetooth

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Connected devices**  > **Connection preferences** > **Bluetooth**.
3. Slide the **Bluetooth** switch to the **On**  position to turn it on. You can directly enable or disable Bluetooth via Quick Settings Panel.

Rename this device

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Connected devices**  > **Connection preferences** > **Bluetooth**.
3. Tap **Device name**.
4. Enter a new name and tap **RENAME** to save.

Pair a Bluetooth device

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Connected devices**  > **Connection preferences** > **Bluetooth**.
3. Tap **Pair new device**.
4. Select the device you want to connect to within the Available devices list and follow the prompts to connect.
 - Make sure the device you want to connect with is discoverable via Bluetooth.
 - Depending on the device, you may be required to enter or accept a passkey.

Rename a paired device

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Connected devices** .
3. Under **Saved devices**, tap **Settings**  next to a paired device name.
4. Tap **Edit** , enter a new name, and tap **RENAME** to save.

Disconnect from a paired device

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Connected devices**  > Tap **Settings**  next to a paired device name and tap **FORGET**.

Search for other devices

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Connected devices**  > **Connection preferences** > **Bluetooth** > **Pair new device**.

Receive data via Bluetooth

When a device attempts to send a file to your phone using Bluetooth, you will be prompted to accept or decline the request.

1. Tap **ACCEPT**.
2. To view the file received, swipe the Status bar down and tap **Bluetooth share: Received files**, or locate the file from Bluetooth settings menu.

Open received files

1. From the Home screen, swipe up to access **Apps** and tap **Files** .
2. Tap **Downloads** to view your files.
3. Tap an item to open it.

Cast

Scan for nearby devices to connect to and set them up. A notification will appear when there are available devices to connect to.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Connected devices**  > **Connection preferences** > **Cast**.
3. Tap **Menu**  > **Enable wireless display**.
4. Tap a device to connect.

Printing

Connect your device to a printer on the same Wi-Fi network.

Add printer

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Connected devices**  > **Connection preferences** > **Printing**.

3. Tap **Default Print Service** to discover the printer on the Wi-Fi network. Or tap **Add service** to install a print service app.

Files received via Bluetooth

1. From the Home screen, swipe up to access **Apps** and tap **Files** .
2. Tap **Browse**  to find recently downloaded files.
3. Tap an item to open it.

Chromebook

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Connected devices**  > **Connection preferences** > **Chromebook**.
3. Tap to manage connections with your Chromebook.

Nearby Share

Nearby Share allows the rapid short-range exchange of images, videos, text, contact info, directions, YouTube videos, and other data via Bluetooth.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Connected devices**  > **Connection preferences** > **Nearby Share**.
3. Slide the switch to the **On**  position to enable this function. You can directly enable or disable Nearby Share feature via Quick Settings Panel.

Device visibility

Set your device's visibility. You can make yourself visible to **Everyone** or some people from **Contacts**, or **Your devices**.

Data

Set data usage method. You can choose **Data**, **Wi-Fi Only**, or **Without internet**

(Files shared offline).

Show notification

Slide the switch to the **On**  position to show notification when devices are sharing nearby.

Note: Nearby Share requires both sender and recipient devices' Bluetooth and Location to be turned on, both devices are unlocked, and close together.

If the content can be sent, a bottom sheet will appear with a list of available contacts to share.

Android Auto

Use Android Auto app to control your phone's maps, media and messages functions, with the Google Assistant while you drive.



1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Connected devices** > **Connection preferences** > **Android Auto**.
3. Download and install the Android Auto app from the Google Play Store to your phone.
4. Tap **CONNECT A CAR** button to view connection details.
5. Plug your phone into this car's Android Auto-compatible USB port.
6. When connected, supported apps will be mirrored from your phone to your car's display.

Note: Hands-free operation through voice commands is encouraged to minimize driving distraction.

Apps

View current running applications, manage permissions, and more.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Apps** .

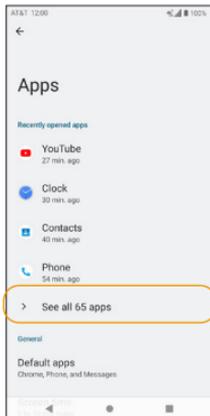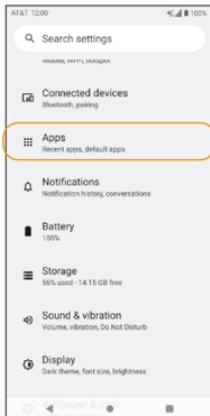

Recently opened apps

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Apps**  > **See all apps**.
3. Tap an app to view detailed information. Tap **OPEN** to access this app, tap **DISABLE** to disable this app, or tap **FORCE STOP** to stop this app.

Default apps

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Apps**  > **Default apps**.
3. Tap to set the default app for the browser, phone, messages, etc. You can also set default apps for opening links.

Screen time

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Apps**  > **Screen time**.
 - You can tap on  the right side of most apps to set daily timers. When the app timer ends, the app is paused for the rest of the day.

Unused apps

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Apps**  > **Unused apps**.
3. Tap to view apps that you have not used for a long time. You can un-install them to free up some space.

Special app access

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Apps**  > **Special app access**.
3. Tap to view app access for special functions, such as display over other apps, unrestricted data, usage access, etc.

Notifications

Manage the settings on notifications.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Notifications** .

App settings

Control notifications from individual apps.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Notifications**  > **App settings**.
3. Apps were categorized into four types: **Most recent**, **Most frequent**, **All apps**, **Turned off**. Select a category from the drop-down list and choose the app you want to adjust the notification settings for.

Notification history

View your recent and snoozed notifications.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Notifications**  > **Notification history**.
3. Slide the switch to the **On**  position to turn it on.
4. Your recent and snoozed notifications will appear.

Conversations

View priority and modified conversations.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Notifications**  > **Conversations**.
3. Your priority and modified conversations are displayed.

To change conversation settings, follow the below steps:

1. Swipe the Status bar down to display the Notification panel.
2. Touch and hold a conversation.

Bubbles

Enable message conversations display as bubbles, floating on top of other apps.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Notifications**  > Bubbles.
3. Slide the switch to the **On**  position to allow apps to show bubbles.

Device & app notification

Control which apps and devices can read notifications.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Notifications**  > **Device & app notifications**.
3. You can see the devices and apps that allowed and not allowed to access notifications.

Notifications on lock screen

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Notifications**  > **Notifications on lock screen**.
3. Select how you want notifications to be displayed on the lock screen.

Sensitive notifications

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Notifications**  > **Notifications on lock screen**.

3. Slide the switch to the **On**  position to show sensitive content when locked.

Do Not Disturb

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Notifications**  > **Do Not Disturb**.
3. Tap  to enable Do Not Disturb mode.
4. You can set what can interrupt Do Not Disturb, schedules, etc.

Wireless Emergency Alerts

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Notifications**  > **Wireless emergency alerts**.
 - **Allow alerts:** Slide the switch to the **On**  position to receive wireless emergency alert notifications.
 - **Extreme threats:** Extreme threats to life and property. Slide the switch to the **On**  position to receive extreme threat alerts.
 - **Severe threats:** Severe threats to life and property. Slide the switch to the **On**  position to receive severe threat alerts.
 - **AMBER alerts:** Child abduction emergency bulletins. Slide the switch to the **On**  position to receive AMBER alerts.
 - **Test alerts:** Receive carrier tests and monthly tests from the safety alert system.
 - **Emergency alert history:** View all the alerts you've received before.
 - **Vibration:** Slide the switch to the **On**  position to enable vibration when receiving an alert.
 - **Alert reminder:** Tap to set alert reminder.

Hide silent notifications in status bar

3. From the Home screen, swipe up to access **Apps** and tap **Settings** .
1. Tap **Notifications**  > **Hide silent notifications in status bar**.
2. Slide the switch to the **On**  position to hide silent notifications in status bar.

Allow notification snoozing

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Notifications**  > **Allow notification snoozing**.
3. Slide the switch to the **On**  position to allow temporarily snoozing certain notifications.

Notification dot on app icon

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Notifications**  > **Notification dot on app icon**.
3. Slide the switch to the **On**  position to allow the display of notification dots on an app icon.



Enhanced notifications

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Notifications**  > **Enhanced notifications**.
3. Slide the switch to the **On**  position to automatically show suggested actions and replies.

Battery

Monitor your phone's battery usage through the Battery settings menu. Check the battery consumption and percentage.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Battery** .

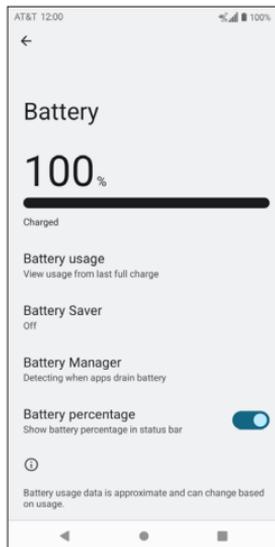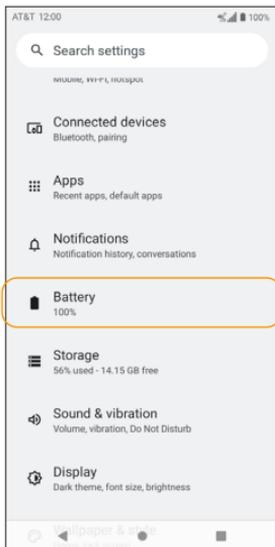




Battery usage

View battery usage from last full charge.


1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Battery**  > **Battery usage**.
3. You can view the battery percentage that each apps used.

Battery Saver

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Battery**  > **Battery Saver**.
 - Slide the **Use Battery Saver** switch to the **On**  position to turn the battery saver mode on. The **Battery Saver** will automatically turn off when the phone is plugged in.

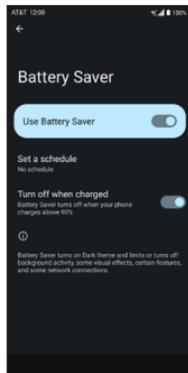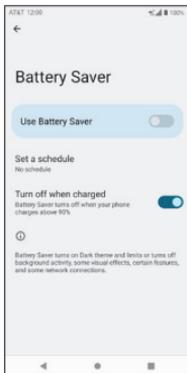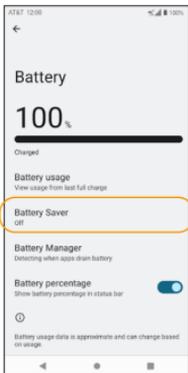

- **Set a schedule:** Tap **Based on percentage** and drag the slider to the percentage you need. The **Battery Saver** will turn on automatically when your phone reaches that battery percentage.

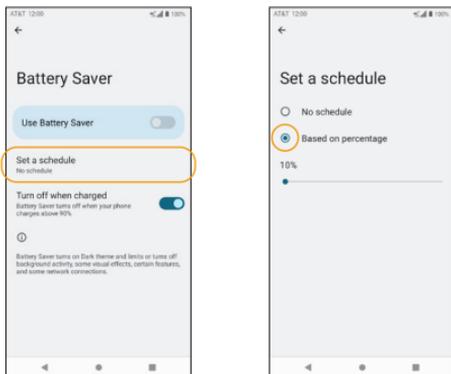

Battery Manager

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Battery**  > **Battery Manager**.
3. Slide the **Use Battery Manager** switch to the **On**  position to enable the battery manager.
4. Monitor the amount of battery being used by apps. If battery usage increases too much, your phone will suggest actions you can take.

Battery percentage

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Battery**  > **Battery percentage**.




- Slide the switch to the **On**  position to show the battery percentage in the Status bar.

Storage

The Storage settings menu allows you to manage internal storage on your phone and provides menu choices for an optional SD card (not included).

Note: The descriptions of this section are based on the scenarios that an SD card is inserted in your phone.

- From the Home screen, swipe up to access **Apps** and tap **Settings** .
- Tap **Storage** .
- Tap **This device** , then tap a category to view the storage amount used by each app.
- Delete backed up files by tapping **Free up space**.

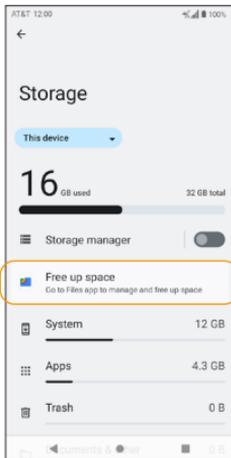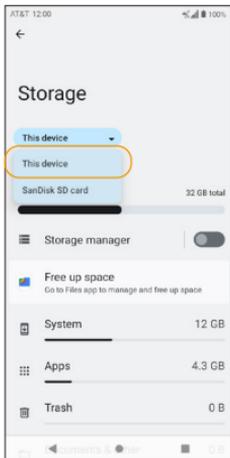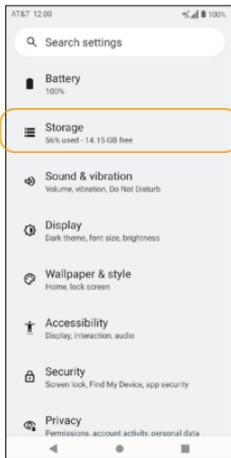

Storage manager

Storage manager removes backed up photos and videos from your device.



- Slide the Storage manager switch to the **On**  position to enable the storage manager.

SD card

From the Storage page, tap **This device** > **SD CARD** to view files stored on your SD card.

Tap **Menu**  to access the following options:



- **Rename:** change the SD card name.
- **Eject:** eject the SD card to allow for safe removal.
- **Format:** format the SD card.

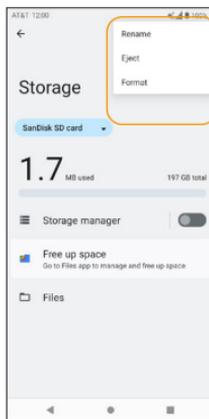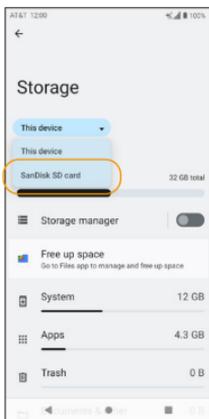

Sound & vibration

The Sound settings menu lets you control your phone's audio, from ringtones and alerts to tap tones and notifications.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Sound & vibration** .

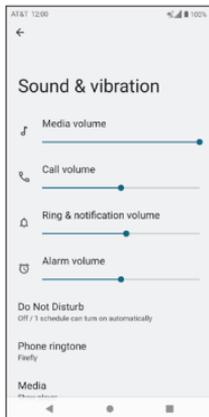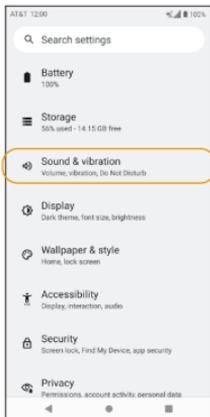

Media volume

Drag the slider to adjust the media and alert notification volume.

Call volume

Drag the slider to adjust the call data volume.

Ring & notification volume

Drag the slider to adjust the ring and notification volume.

Alarm volume

Drag the slider to adjust the alarm volume.

Do Not Disturb

Tap **TURN ON NOW** to enable Do Not Disturb mode. Some notifications will be silenced when Do Not Disturb is turned on. You can set what can interrupt Do Not Disturb, schedules, etc.

Phone ringtone

Select a ringtone for incoming phone calls. You can customize your own ringtone by tapping **Add ringtone**.

Media

Slide the **Pin media player** switch to the **On**  position to have media player stays open in the Quick Settings Panel when the media session has ended.

Slide the **Show media recommendations** switch to the **On**  position to show media recommendations basing on your activities.

Vibration & haptics

Slide the switch to the **On**  position to enable vibration for calls, notifications, alarms and interactive haptics.

Default notification sound

Select the default notification sound. You can customize your own notification sound by tapping **Add notification**.

Default alarm sound

Select the default alarm sound. You can customize your own alarm sound by tapping **Add alarm**.

Dial pad tones

Slide the switch to the **On**  position to enable dial pad tones.

Screen locking sound

Slide the switch to the **On**  position to enable screen locking sounds.

Charging sounds and vibration

Slide the switch to the **On**  position to enable the charging sounds and vibration.

Touch sounds

Slide the switch to the **On**  position to enable touch sounds.



Always show icon when in vibrate mode

Slide the switch to the **On**  position to show vibrate icon in the status bar.

Display

Use the phone's Display settings menu to adjust items such as brightness, screen timeout, and more.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Display** .

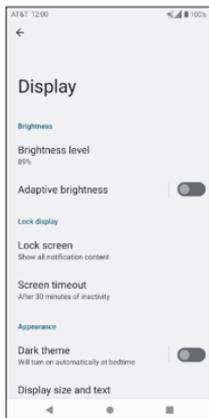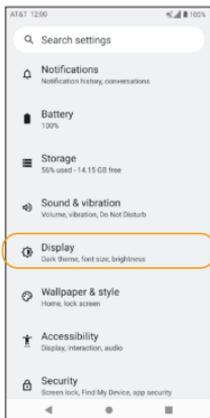

Brightness level

Tap to adjust the screen brightness level. Drag the slider to adjust the brightness level manually.

Adaptive brightness

Slide the switch to the **On**  position to enable Adaptive brightness. When turned on, your phone will automatically adjust screen brightness based on the lighting conditions.

Lock screen

Manage what will show on the lock screen.

Screen timeout

Tap to set screen timeout. Your screen will automatically go to sleep after the set amount of time.

Dark theme

Slide the switch to the **On**  position to enable the dark theme.

Night Light

Slide the switch to the **On**  position to enable Night Light. When enabled, you can set a Night Light schedule and intensity. You can also enable automatic Night Light until sunrise.

Auto-rotate screen

Slide the switch to the **On**  position to enable screen rotation.

Network name

Slide the switch to the **On**  to display network name in the status bar.

Screen saver

Set the screen saver, adjust screen saver settings, and set the time to activate the screen saver.

Lift to wake

Slide the switch to the **On**  position to enable Lift to wake function. It allows you to turn on the phone display by simply lifting your phone from a table or removing it from your pocket.



Tap to wake

Slide the switch to the **On**  position to enable Tap to wake function which allows you to wake the device by double tapping anywhere on the screen.

Wallpaper & style

Change wallpaper, basic colors, and themes.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Wallpaper & style** .

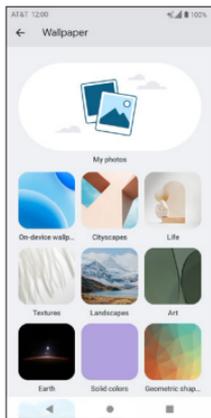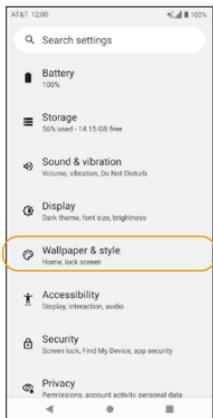

Change wallpaper

Choose from photos and wallpapers for the lock screen and home screen.

- **Wallpaper colors:** Select the color scheme for app icons, widgets, and menus onscreen.
- **Basic colors:** Select from basic color options for app icons, widgets, and menus onscreen.

Dark theme

Slide the switch to the **On**  position to enable the dark theme.



Themed icons

Slide the switch to the **On**  position to correspond with chosen wallpaper or basic color.

Accessibility

The Accessibility settings menu allows you to manage accessibility-related apps. Accessibility services are special features to make the device easier to use for those with certain physical disabilities.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Accessibility** .

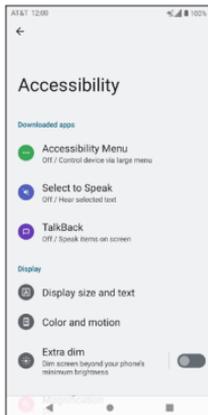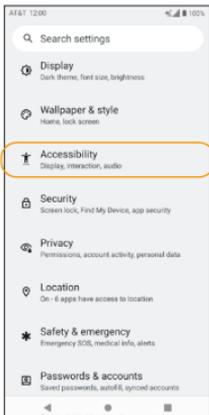

Downloaded apps

View a list of downloaded accessibility apps.

- **Accessibility Menu:** Provides a large on-screen menu to control functions like volume and brightness, taking screenshots, and more.
- **Select to Speak:** Tap specific items onscreen to hear them read or described aloud.
- **Switch Access:** Control the device with external switches or front camera.
- **TalkBack:** Provides spoken feedback so device can be used without looking at the screen.

Display size and text

- **Font size:** Drag the slider to adjust the font size.
- **Display size:** Drag the slider to make the items on your screen smaller or larger.
- **Bold text:** Bold the texts displayed on your screen.
- **High contrast text:** Enable high contrast text display.

Color and motion

- **Color correction:** Enable color correction. This may affect performance.
- **Color inversion:** Enable color inversion. This may affect performance.
- **Dark theme:** Slide the switch to the **On**  position to access dark theme mode. You can set dark theme schedule.
- **Remove animations:** Slide the switch to the **On**  position to disable animations.
- **Large mouse pointer:** Slide the switch to the **On**  position to enable the large mouse pointer function.

Extra dim

Slide the switch to the **On**  position to dim screen beyond your phone's minimal brightness.

Magnification

Enable screen magnification.

- **Magnification shortcut:** Slide the switch to the **On**  position to enable magnification shortcut. Tap the magnification icon  that appears on the bottom right corner of the screen to magnify your screen.
- **Magnification type:** Tap **Magnification shortcut** to choose magnification type.

Timing controls

- **Touch & hold delay:** Set the touch & hold delay to **Short**, **Medium**, or **Long**.
- **Time to take action (Accessibility timeout):** Choose how long to show messages that ask you to take an action.
- **Autoclick (dwell timing):** Enable automatic clicking when using a mouse and adjust the amount of time between the mouse stopping and the click.

System controls

- **System navigation:** Set system navigation by gestures or using Back, Home and Recent apps buttons located at the bottom of the screen.
- **Power button ends call:** Enable ending calls by pressing the **Power/Lock** key.
- **Auto-rotate screen:** Enable or disable screen rotation.

Vibration & haptics

Enable or disable ring, notification, and touch feedback vibration.

- **Ring vibration:** Enable or disable vibration for ringing.
- **Vibrate first then ring gradually:** Enable or disable for vibration before ring.
- **Notification vibration:** Enable or disable vibration for notifications.
- **Alarm vibration:** Enable or disable for vibration with alarm.
- **Touch feedback:** Enable or disable vibration for touch.
- **Media vibration:** Enable or disable for media vibration.

Caption preferences

Slide the switch to the **On**  position to show captions. You can also set caption display language, text size, and caption style.

Real-Time text call

Use text to communicate during a call.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Accessibility**  > **Real-Time text call**.
3. Manage RTT call options.
 - **RTT Call button:** Tap to select between **Visible during calls** or **Always Visible** to always have access to the RTT call button.
 - **RTT Transcript:** Slide the switch to the **On**  position to turn the transcript of history on.
 - **RTT Visual:** Slide the switch to the **On**  position to use LED Flash for RTT Alerts when coming RTT call.

Audio description

Slide the switch to the **On**  position to hear a description of what's happening on screen in supported movies and shows.

Hearing aids

Pair hearing aids to the device.

Audio adjustment

- **Mono audio:** Slide the switch to the **On**  position to enable combining channels when playing audio.
- **Audio balance:** Drag the slider left or right to adjust the audio balance from the speaker.

Accessibility shortcuts

- **Accessibility button:** Manage the settings on accessibility button, such as location, size, etc.
- **Shortcut from lock screen:** Allow feature shortcut to turn on from the lock screen.

Text-to-speech output



1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Accessibility**  > **Text-to-speech output**.
 - **Preferred engine:** Tap to set the text-to-speech engine (Google is default). Tap  to manage text-to-speech settings.
 - **Language:** Tap to set the language for this function.
 - **Speech rate:** Drag the slider to adjust speech rate.

- **Pitch:** Drag the slider to adjust pitch.
- Tap **PLAY** to play the example.
- Tap **RESET** to reset all Text-to-speech settings to the default settings.

Security

The Security settings will help you to secure your device, protect your data, and keep your privacy.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Security** .

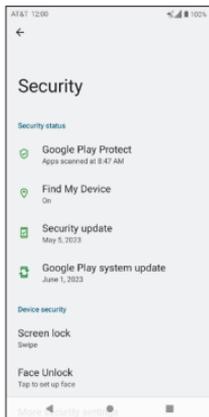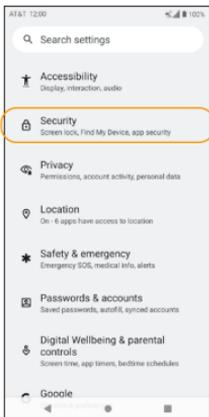

Google Play Protect

Google will regularly check your device and prevent/warn you of potential harm. Only apps from Play Store will be checked.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Security**  > **Google Play Protect**.
 - Tap **Scan** to start scanning your device for harmful apps.
 - Tap **Settings**  to view Play Protect settings:
 - Slide the **Scan apps with Play Protect** switch to the **On**  position to enable regular scanning for harmful apps on your device.
 - Slide the **Improve harmful app detection** switch to the **On**  position to enable sending unknown apps to Google for better detection.

Find My Device

Find My Device helps you locate your device remotely, keeping your data safe if your phone is lost.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Security**  > **Find My Device**.
3. Slide the switch to the **On**  position to activate Find My Device.
 - There are several ways available to locate your device.

Security update

Check for new software updates for your device.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Security**  > **Security update**.
3. Tap **Check for update** to check for updates.

Google Play system update





Check if a Google Play system update is available.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .

2. Tap **Security**  > **Google Play system update**.
3. Follow any steps on the screen.

Screen lock

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Security**  > **Screen lock**.
 - **None**: Disable any screen lock.
 - **Swipe**: Tap to set swipe to unlock.
 - **Pattern**: Tap to set an unlock pattern. Follow the prompts to finish the settings.

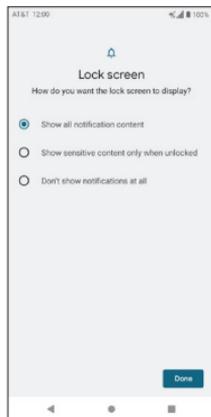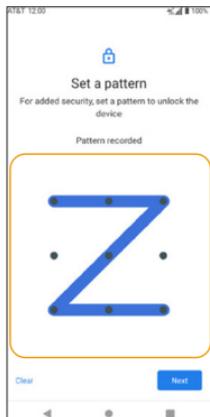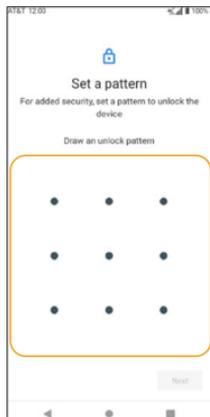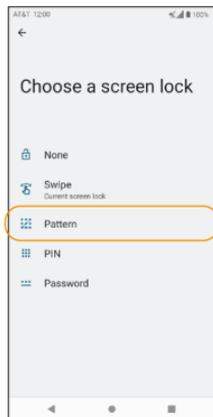

- **PIN**: Tap to set a PIN code as the screen unlock method.
- **Password**: Tap to set a password as the screen unlock method.

Important: To protect your phone and data from unauthorized access, it is recommended that you use the highest security level available (Password protection). It is also recommended you frequently change your password to ensure the safety of your phone and personal data. If you failed to enter the correct pattern, PIN, or password, after five attempts, you will be prompted to wait for 30 seconds before you can try again.

3. Tap  next to Screen lock to adjust some settings on screen lock.
 - **Make pattern visible:** Slide the switch to the **On**  position to make the pattern visible.
 - **Lock after screen timeout:** Tap to set an automatic lock timer.
 - **Power button instantly locks:** Slide the switch to the **On**  position to activate instant lock with the power button.

Note: "Make pattern visible" is only available when the pattern screen lock is set.

Face unlock

Unlock your phone by looking at it.

Set up face authentication

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Security**  > **Face unlock**.
3. Enter your pattern, PIN, or password.

Note: To add a face unlock, you must set your backup screen lock method first.

4. Keep your eyes open and make sure your face is fully visible and not covered by any object, such as a hat or sunglasses.

Unlock your phone with your face

To unlock your phone, press the **Power/Lock** key to light up the phone screen and trigger Face unlock automatically.

Note: Face unlock is less secure than password. Someone who looks like you could unlock your phone.

Smart Lock

Unlock your device automatically in certain conditions.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Security**  > **More security settings** > **Smart Lock**.
 - **On-body detection:** Tap and slide the switch to the **On**  position to activate this feature. Your device will now be kept unlocked while it is on you.
 - **Trusted places:** Tap to add a trusted location where the device can remain unlocked.
 - **Trusted devices:** Tap to add a second device that keeps your device unlocked when it is nearby.

Device admin apps

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Security**  > **More security settings** > **Device admin apps**.
3. Enable or disable Device admin apps according to your preference.

SIM card lock

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Security**  > **More security settings** > **SIM card lock**.
 - Slide the **Lock SIM card** switch to the **On**  position to enable SIM card lock. SIM lock will require you to enter a PIN to use your device.

- Tap **Change SIM PIN** to change the PIN code.

Encryption & credentials

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Security**  > **More security settings** > **Encryption & credentials**.
 - **Encrypt phone**: Your phone is already encrypted.
 - **Trusted credentials**: Tap to view trusted security certificates.
 - **User credentials**: Tap to view and modify stored credentials.
 - **Install a certificate**: Tap to install certificates from the SD card.
 - **Clear credentials**: Tap to remove all certificates.
 - **Certificate management app**: Tap to view apps where the credentials can be used for authentication.

Trust agents

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Security**  > **More security settings** > **Trust agents**.
3. View your trusted agents. Slide the switch to the **On**  or **Off**  position to turn them on or off.



App pinning

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Security**  > **More security settings** > **App pinning**.
3. Slide the switch to the **On**  or **Off**  position to turn it on or off. When turned on, you can use App pinning to keep the current screen in view until you unpin.

Privacy

The Privacy settings will help you to secure your device, protect your data, and keep your privacy.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Privacy** .

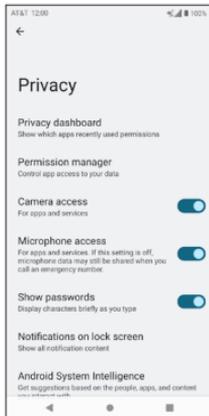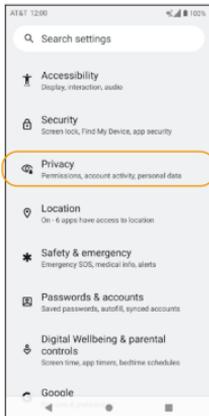

Privacy dashboard

Show which apps used permissions in the past 24 hours.

Permission manager

Control permission for apps that use your camera, location, microphone, contacts, etc.

Camera access

Slide the switch to the **On**  position to allow camera access for apps and services.

Microphone access

Slide the switch to the **On**  position to allow microphone access for all apps and services.

Show passwords

Slide the switch to the **On**  position to display characters briefly as you type passwords.

Notifications on lock screen

Choose to show or hide notification content on the lock screen.

Android System Intelligence

Get suggestions based on the people, apps, and content you interact with.

App content

Slide the switch to the **On**  position to allow apps to send content to the Android system.

Show clipboard access

Slide the switch to the **On**  position to show a message when apps access text, images, or other content you've clipped.

Autofill service from Google

Autofill your information from your Google Account.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Privacy**  > **Autofill service from Google** > **Continue**.
3. Fill in the categories with information you would like to autofill, such as an address, payment methods, etc.

Activity controls

Choose the activities and information you allow Google to save.

Ads

Tap to control advertising ID and personalization.

Usage & diagnostics



Share data to help improve Android.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Privacy**  > **Usage & diagnostics**.
 - Slide the switch to the **On**  position to enable Usage & diagnostics.

Location

The Location settings will help you to secure your device, protect your data, and keep your privacy.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Location** .
3. Slide the switch to the **On**  position to turn location services on.

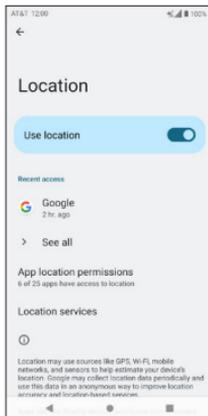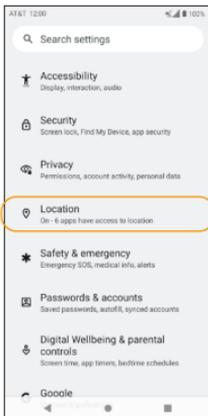

Recent access

View a list of apps that have recently requested your location.

App location permissions

Tap to view which apps have permission to access location services.

Location services

Earthquake alerts

Slide the switch to the **On**  position to enable Earthquake alerts. Not supported in all regions.

Emergency Location Service

Slide the switch to the **On**  position to turn Emergency Location Services (ELS) on. When you call or text an emergency number, your device will use ELS to automatically send your location to emergency responders.

Google Location Accuracy

Slide the Google Location Accuracy switch to the **On**  position to use GPS, Wi-Fi, mobile networks, and sensors to determine your location.

Google Location History

Tap to view your location history.

Google Location Sharing

Tap to share your real-time location from your devices with people you choose.

Wi-Fi scanning

Improve location accuracy by allowing system apps and services to detect Wi-Fi networks at any time.



Bluetooth scanning

Improve location accuracy by allowing system apps and services to detect Bluetooth devices at any time.

Safety & emergency

Fulfill your medical and emergency information, view emergency alerts, and manage settings on emergency SOS and location service.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Safety & emergency** .

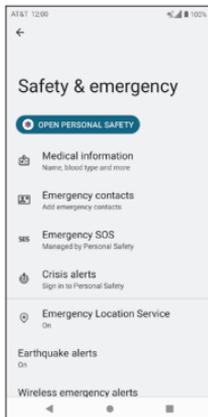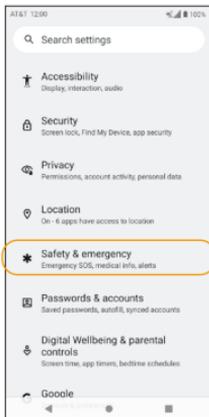

Medical information

Add your medical information such as your name, address, blood type, allergies, etc.

Emergency contacts

Choose contacts as your emergency contacts to be accessed from the lock screen in case of an emergency.

Emergency SOS

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Safety & emergency**  > **Emergency SOS**.
3. Tap **Use Emergency SOS**  to turn the Emergency SOS function on.
4. When enabled, if you have an emergency and need emergency services, press the **Power/Lock** key 5 or more times quickly.

Play alarm sound

Slide the switch to the **On**  position to play a loud sound when Emergency SOS is starting.

Call emergency services

Tap to edit your emergency number.

Crisis alerts

Get notified about natural disasters and public emergencies affecting your area.

Emergency Location Service

Slide the switch to the **On**  position to turn Emergency Location Services (ELS) on. When you call or text an emergency number, your device will use ELS to automatically send your location to emergency responders.

Earthquake alerts

Slide the switch to the **On**  position to to Earthquake alerts on. Support varies by region.

Wireless emergency alerts

Slide the switch to the **On**  position to turn wireless emergency alerts on. You can also view emergency alert history and manage alert preferences.

Passwords & accounts

Set up and manage all of your accounts, including your Google Account and other social networking accounts, through the Accounts settings menu.

Passwords

See, change, or remove passwords you saved in your Google Account.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Passwords & accounts**  > **Google**.

Password Manager

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Passwords & accounts**  > **Google** > **Password Manager**.
3. Tap  to manage your password settings
 - **Offer to save passwords:** Save passwords to your Google account.
 - **Auto sign-in:** Sign in to websites automatically using saved credentials.
 - **Password alerts:** Notify you when you saved passwords are found online.
 - **Export passwords:** Download a copy of your passwords for other uses.
 - **Import passwords:** Import passwords to your Google Account.
 - **Add shortcut to your home screen:** Add Google Password Manager to your home screen for quick access.
 - **Set up on-device encryption:** Encrypt data on your device before it's

saved to Google Password Manager.

- **Declined site or app:** List out the sites and apps you've chosen not to save passwords. You can add more into the list by tapping **Add more**.

Password Checkup

Check the security of passwords saved to your Google Account.

Note: This option is available only when you have filled in passwords prior.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Passwords & accounts**  > **Google** > **Password Checkup**.
3. Tap **password checkup**.
4. Follow the prompts to complete checkup and change unsafe passwords if necessary.

Search passwords

Search in saved passwords.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Passwords & accounts**  > **Google**.
3. Tap the search bar and enter what you want to search.
4. Tap  to search in listed passwords.

Autofill service

Autofill your information when needed from your Google Account.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Passwords & accounts**  > **Autofill service**.
3. Tap  next to Google.
4. Slide the **Use Autofill with Google** switch to the **On**  position to

activate the autofill function.

5. Fill in the categories with information you would like to autofill, such as payment methods, etc.

Preferences

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Passwords & accounts**  > **Autofill service**.
3. Tap  next to Google > **Preferences**.
 - **Sync**: Use preferences on other devices with your Google Account.

Add account

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Passwords & accounts**  > **Add account**.
3. Tap the type of account you want to add.
4. Follow the prompts to enter your credentials and set up the account.
 - For more information about setting up a Google Account, see ["Google Account" on page 44](#).

Automatically sync app data



1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Passwords & accounts**  > **Automatically sync app data**.
3. Slide the **Automatically sync app data** switch to the **On**  position to activate automatic data syncing.

Digital Wellbeing & parental controls

Your Digital Wellbeing tools

Use app timers and other tools to keep track of screen time and unplug more easily.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Digital Wellbeing & parental controls** .

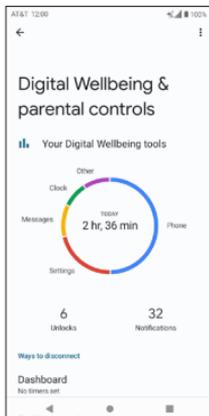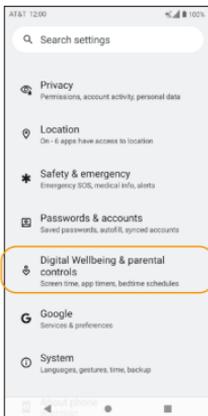

Ways to disconnect

- **Dashboard:** View your screen time and set timers for your apps.
- **Bedtime mode:** Set a bedtime schedule to disconnect from your phone and avoid interruptions while you sleep.
- **Focus mode:** Pause distracting apps when you need time to focus.

Reduce interruptions

- **Manage notifications:** Enable or disable the notifications of apps.
- **Do Not Disturb:** Mute your device but allow exceptions such as calls or texts from certain contacts.
- **Heads Up:** Prompt you to stop staring at your phone while walking. Follow the steps to set up Heads Up feature.

Show icon in the app list

Slide the switch to the **On**  position to enable icons in the app list.

Parental controls

Add content restrictions and set other limits to help your child balance their screen time.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Digital Wellbeing & parental controls**  > **Set up parental controls**.
3. Follow the screens to finish the setup.

Google

Configure your device's Google settings. Available options depend on your Google Account.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Google** .
- **COVID-19 Exposure Notifications:** Select your region and turn on Exposure Notifications to get notified if you've been exposed to someone who reports having COVID-19.

Note: Not all regions have Exposure Notifications available.

Tap **Learn more** on the middle of the screen to get more information on

detailed steps to set this up and how it works.

- **Services on this device:** Select an option to customize your Google Account settings.

System




Manage detailed settings for your phone, including language and input settings, gestures, date and time, reset options, etc.

Languages & input

Set the language for the phone's menus and keyboards, select and configure keyboard settings, configure speech input settings, and more.

Languages

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **System**  > **Language & input** > **Languages**.

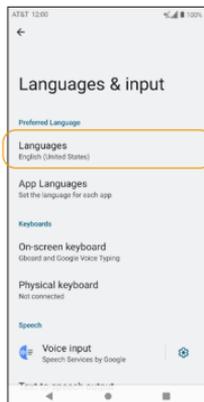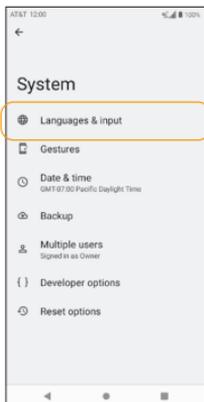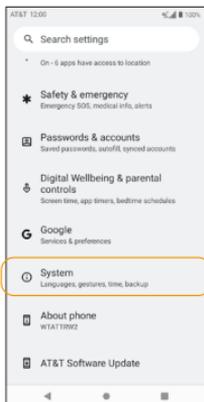

3. View your languages.
 - When more than one language has been added, you can touch and hold the language, then drag it up to the first position to set as the default display language.
 - To add a language, tap **Add a language**, then select the language you want to add.
 - To remove a language, Tap **Menu**  > **Remove**.

On-screen keyboard

View your virtual keyboard settings.

- **On-screen keyboards:** Activate or deactivate your virtual keyboards.

Physical keyboard

View your physical keyboard settings.

- **Use on-screen keyboard:** Slide the switch to the **On**  or **Off**  position to enable or disable displaying a virtual keyboard while a physical keyboard is active.
- **Keyboard shortcuts:** Tap to set keyboard shortcuts.

Voice input

Configure Voice input for Speech Services by Google.

Text-to-speech output

Manage settings on the text-to-speech function.

Spell checker

Slide the switch to the **On**  or **Off**  position to enable or disable the spell checker.

- **Languages:** Select spell checker language.

- **Default spell checker:** Select the default spell checker app.

Personal dictionary

Add custom words to your personal dictionary. Tap **Add**  to add a word to the dictionary.

Pointer speed

Set the speed of the pointer for a mouse/track pad.

Gestures

Manage gesture settings.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **System**  > **Gestures**.

Quickly open camera

Open the Camera app from any screen by quickly pressing the **Power/Lock** key twice. Slide the switch to the **On**  position to enable.

System navigation

- **Gesture navigation:** Select the checkbox to enable the following navigation gestures:
 - To go to the Home screen, swipe up from the bottom of the screen.
 - To switch apps, swipe up from the bottom, hold, then release.
 - To go back to the previous screen, swipe from either the left or right edge.
 - Tap  to add gesture to invoke assistant and adjust gesture sensitivity.
- **3-button navigation:** Select the checkbox to enable 3-button navigation. This option is enabled by default.

- To go to the Home screen, tap .
- To switch apps, tap .
- To go back to the previous screen, tap .

Press and hold power button

Press and hold the **Power/Lock** key to access Google Assistant. Slide the switch to the **On**  position to enable this function.

Date & time

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **System**  > **Date & time**.

Set time automatically

Tap to automatically use the time and date provided by a connected Wi-Fi network or GPS. Disable this function to enter the date and time manually.

Set date

Tap to set the date manually. This option is available only when the **Set time automatically function** is disabled.

Set time

Tap to set the time manually. This option is available only when the **Set time automatically function** is disabled.

Automatic time zone

Slide the switch to the **On**  position to automatically set the time zone. Disable this function to select the time zone manually.

Select time zone

Manually select your time zone. This option is available only when the **Automatic time zone** function is disabled.

Use location to set time zone

Slide the switch to the **On**  position to use location to set the time zone.

Use locale default

Slide the switch to the **On**  position to use the default time format.

Use 24-hour format

Slide the switch to the **On**  position to enable the 24-hour time format. This option is available only when the **Use locale** default function is disabled.

Backup

Your phone's Backup settings let you back up your phone's data and settings to Google servers before resetting your phone to the original factory settings.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **System**  > **Backup**.
3. Slide the **Backup by Google One** switch to the **On**  or **Off**  position to enable or disable automatic backup to your Google Drive.

Backup details

You can check what data and which apps are included in your backup.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **System**  > **Backup** > **Backup details**.

Advanced settings

Back up using mobile or metered Wi-Fi data: Slide the switch to the **On**  or **Off**  position to enable or disable backup using mobile data or Wi-Fi data.

Multiple users

Share your phone by adding new users. Slide the switch to the **On**  position to allow multiple users.

Reset options



1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **System**  > **Reset options**.
 - **Reset Wi-Fi, mobile & Bluetooth:** Reset all network settings, including Wi-Fi, Mobile data, and Bluetooth. Tap **RESET SETTINGS** to reset.
 - **Reset app preferences:** Reset all app preferences, including disabled apps, disabled app notifications, default apps, background data restrictions, etc. Tap **RESET APPS** to reset.
 - **Erase all data (factory reset):** Completely erase all data from your phone's internal storage and reset the device to factory settings. Tap **Erase all data** to reset.

Note: Performing a factory reset will also erase any data on an installed SD card. Unmount the card to avoid losing any data you may have stored on it.

About phone

Access important phone information, view legal and safety information, etc.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **About phone** .

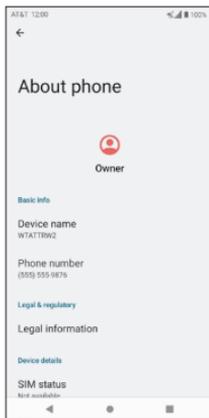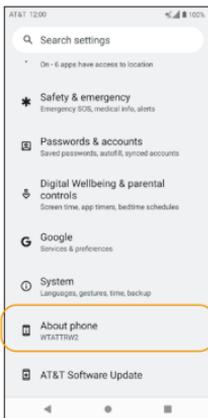

- **Device name:** Tap to edit your phone's display name.
- **Phone number:** Display your phone number.
- **Legal information:** View your device's legal information, including third-party licenses, Google legal, system web view licenses, etc.
- **SIM status:** View your SIM status information, such as the Network, Phone number on SIM, Mobile network state, etc.
- **Model:** View your device model and hardware information.
- **IMEI:** View your IMEI.

- **Android version:** View your device's current Android version and other relevant information.
- **IP address:** View your IP address.
- **Wi-Fi MAC address:** View your Wi-Fi MAC address.
- **Device Wi-Fi MAC address:** View your device's fixed MAC address.
- **Bluetooth address:** View your Bluetooth address.
- **Up time:** View your up time.
- **Build number:** View your build number.
- **Custom build version:** View your Custom build version.

AT&T Software Update

Check for new software updates for your device.



Getting help

The topics in this section will cover troubleshooting tips and phone specifications.

For assistance

Troubleshooting

Check below for solutions to common problems you may experience.

Problem: The phone freezes or operations are unstable.

Solution: Restart the device. Press and hold the **Power/Lock** key and the **Volume up** key, then tap **Restart**.

Note: Data that was being edited will be erased when the device is restarted.

Problem: The device starts freezing after installing a new app.

Solution: The newly installed app may be causing the device to freeze. Uninstall the app in Safe mode. To enable Safe mode:

1. Press and hold the **Power/Lock** key and the **Volume up** key, then touch and hold **Power off**. Read the disclaimer for Safe mode, and then tap **OK**.
2. After turning the phone on in Safe mode, "Safe mode" will appear at the bottom left corner.
3. After restarting in Safe mode, your phone can be powered on as usual.
4. Before enabling Safe mode, it is recommended that you back up important data.
5. To exit Safe mode, restart the device. Press and hold the **Power/Lock** key and the **Volume up** key, then tap **Restart**. The phone will reboot in normal mode.

Problem: The phone will not make calls, send messages, check email, or connect to the Internet.

- **Solution 1:** The network signal may be too weak or you may be out of the

service area. Return to an area with a strong network signal.

- **Solution 2:** Restart the device. Press and hold the **Power/Lock** key, then tap **Restart**.
- **Solution 3:** Make sure Airplane mode is not active. From the Home screen, swipe up to access **Apps** and tap **Settings**  > **Network & internet**  > **Airplane mode** and ensure the switch is in the **Off**  position.
- **Solution 4:** Make sure mobile data is enabled. From the Home screen, swipe up to access **Apps** and tap **Settings**  > **Network & internet**  > **Mobile network** and ensure the switch is in the **On**  position.

Problem: The battery drains too quickly.

Solution: Making calls or connecting to a mobile network outside of your service area will drain the battery. Certain apps and functions can also drain the battery.

Tip: You can enable the Battery Manager to help identify which apps are draining the battery. From the Home screen, swipe up to access **Apps** and tap **Settings**  > **Battery**  > **Battery Manager** and slide the switch to the **On**  position.

Problem: An app will not download or install.

- **Solution 1:** Make sure the device has enough space for the app. Apps may not be installed with minimal free space on the phone or SD card. To check free storage space, see ["Storage" on page 172](#).
- **Solution 2:** The app is not supported by your phone. Make sure your software version is up to date and download any updates.

Problem: The phone will not unlock.

- **Solution 1:** Make sure you entered your pattern/PIN/password correctly.

- **Solution 2:** Restart the device. Press and hold the **Power/Lock** key and the **Volume up** key, then tap **Restart**.

Note: Data that was being edited will be erased when the device is restarted.

Specifications

The following tables list your phone's and battery's specifications.

Phone specifications

Specification	Description
Weight	Approx. 165g
Continuous talk time	Up to 6 hours
Continuous standby time	Up to 200 hours
Charging time	3 hours
Dimensions (L x W x H)	Approx. 149.34 x 71.8 x 8.77mm
Display	5.5" HD+, 18:9 aspect ratio, 1440 x 720 resolution
Processor	2.0 GHz, Quad-core, MediaTek MT6761V/WB
Cameras	Rear camera: 8MP, Front camera: 5MP
Memory	3 GB RAM / 32 GB ROM

Specification	Description
Communication speed	3G B2/4/5 + B1/8 Roaming 4G LTE B2/B4/B5/B12/B14/B30 + B3/B7/B20 Roaming
Android version	Android 13

Battery specifications

Item	Description
Voltage	3.85 V
Type	Lithium-ion (Non-removable)
Capacity	Typical capacity: 2500 mAh

Licenses

microSD Logo is a trademark of SD-3C LLC.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by its affiliates is under license. Other trademarks and trade names are those of their respective owners.

The Wi-Fi Logo is a certification mark of the Wi-Fi Alliance.

Copyright information

Google, Android, Google Play and other marks are trademarks of Google LLC. All other trademarks are the property of their respective companies.



Safety and use

The topics in this section will introduce how to use your mobile device safely.

Please read before proceeding

THE BATTERY IS NOT FULLY CHARGED WHEN YOU TAKE IT OUT OF THE BOX. DO NOT ATTEMPT TO REMOVE THE BATTERY PACK.

Important health information and safety precautions

When using this product, the safety precautions below must be taken to avoid possible legal liabilities and damages. Retain and follow all product safety and operating instructions. Observe all warnings in the operating instructions on the product. To reduce the risk of bodily injury, electric shock, fire, and damage to the equipment, observe the following precautions.

Electrical safety

This product is intended for use when supplied with power from the designated battery or power supply unit. Other usages may be dangerous and will invalidate any approval given to this product.

Safety precautions for proper grounding installation

Warning: Connecting to an improperly grounded equipment can result in an electric shock to your device.

This product is equipped with a USB Cable for connecting with desktop or notebook computers. Be sure your computer is properly grounded (earthed) before connecting this product to the computer. The power supply cord of a desktop or notebook computer has an equipment grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet which is properly installed and grounded in accordance with all local codes and ordinances.

Safety precautions for power supply unit

Use the correct external power source

A product should be operated only from the type of power source indicated on the electrical ratings label. If you are not sure of the type of power source required, consult your authorized service provider or local power company. For a product that operates from battery power or other sources, refer to the operating instructions that are included with the product.

This product should be operated only with the following designated power supply unit(s).

Travel charge: Input: 100-240V, 50/60Hz, 0.2A. Output: 5V, 1200mA.

Battery must be used with caution

This product contains a Lithium-ion battery. There is a risk of fire and burns if the battery pack is handled improperly. Do not attempt to open or service the battery pack. Do not disassemble, crush, puncture, short circuit the external contacts or circuits, dispose of in fire or water, or expose a battery pack to temperatures higher than 140°F (60°C). The operating temperature for the phone is 14°F (-10°C) to 113°F (45°C). The charging temperature for the phone is 32°F (0°C) to 113°F (45°C).

Warning: Battery is non-removable. Do not attempt to remove the battery for danger of explosion.

To reduce the risk of fire or burns, do not disassemble, crush, puncture, short circuit the external contacts, expose to temperature above 113°F (45°C), or dispose of in fire or water. Do not attempt to replace the non-removable battery. The phone and battery as a unibody device must be disposed of in accordance with locally applicable environmental regulations or guides supplied with your product.



Take extra precautions

- Do not disassemble or open, crush, bend or deform, puncture, or shred.
- Do not short circuit a battery or allow metallic conductive objects to contact the battery terminals.
- Only use the USB cable provided with the phone or that bear the USB-IF logo or have completed the USB-IF compliance program.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion, or other hazards.
- Battery usage by children should be supervised.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per CTIA Certification Requirement for Battery System Compliance to IEEE1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazards.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage, or other hazards.
- Promptly dispose of used batteries in accordance with local regulations.
- Avoid dropping the phone. If the phone is dropped, especially on a hard

surface, and the user suspects damage, take it to a service center for inspection.

- Improper battery use may result in a fire, explosion, or other hazards.
- If the battery leaks:
 - Do not allow the leaking fluid to come in contact with skin or clothing. If already in contact, flush the affected area immediately with clean water and seek medical advice.
 - Do not allow the leaking fluid to come in contact with eyes. If already in contact, DO NOT rub; rinse with clean water immediately and seek medical advice.
 - Take extra precautions to keep a leaking battery away from fire as there is a danger of ignition or explosion.

Safety precautions for direct sunlight

Keep this product away from excessive moisture and extreme temperatures. Do not leave the product inside a vehicle or in places where the temperature may exceed 113°F (45°C), such as on a car dashboard, windowsill, or behind a glass that is exposed to direct sunlight or strong ultraviolet light for extended periods of time. This may damage or overheat the product or pose a risk to the vehicle.

Prevention of hearing loss

Permanent hearing loss may occur if earphones or headphones are used at a high volume for prolonged periods of time.

Safety in aircraft

Due to the possible interference caused by this product to an aircraft's navigation system and its communications network, using this device's phone function on board an airplane is against the law in most countries. If you want

to use this device while on board an aircraft, remember to turn off your RF on your phone by switching to Airplane mode.

Environment restrictions

Do not use this product in gas stations, fuel depots, chemical plants or where blasting operations are in progress, or in potentially explosive atmospheres such as fueling areas, fuel storehouses, below deck on boats, chemical plants, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Please be aware that sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Explosive atmospheres

When in any area with a potentially explosive atmosphere or where flammable materials exist, the product should be turned off and the user should obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Users are advised not to use the equipment at refueling points, such as service or gas stations, and are reminded of the need to observe restrictions on the use of radio equipment in fuel depots, chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. These include fueling areas, below deck on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Road safety

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands-free kit) causes distraction and can lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Safety precautions for RF exposure

- Avoid using your phone near metal structures (for example, the steel frame of a building).
- Avoid using your phone near strong electromagnetic sources, such as microwave ovens, sound speakers, TV, and radio.
- Use only original manufacturer-approved accessories or accessories that do not contain any metal.
- Use of non-original manufacturer-approved accessories may violate your local RF exposure guidelines and should be avoided.

Interference with medical equipment functions

This product may cause medical equipment to malfunction. The use of this device is forbidden in most hospitals and medical clinics.

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your healthcare provider may be able to assist you in obtaining this information.

Turn your phone OFF in healthcare facilities when any regulations posted in these areas instruct you to do so. Hospitals or healthcare facilities may be using equipment that could be sensitive to external RF energy.

Non-ionizing radiation

Your device has an internal antenna. This product should be operated in its normal-use position to ensure the radioactive performance and safety of the interference. As with other mobile radio transmitting equipment, users are advised that for satisfactory operation of the equipment and for the safety of personnel, it is recommended that no part of the human body be allowed to come too close to the antenna during operation of the equipment.

Use only the supplied integral antenna. Use of unauthorized or modified

antennas may impair call quality and damage the phone, causing loss of performance and SAR levels exceeding the recommended limits as well as result in noncompliance with the local regulatory requirements in your country.

To assure optimal phone performance and ensure human exposure to RF energy is within the guidelines set forth in the relevant standards, always use your device only in its normal-use position. Contact with the antenna area may impair call quality and cause your device to operate at a higher power level than needed.

Avoiding contact with the antenna area when the phone is IN USE optimizes the antenna performance and the battery life.

Electrical safety

Accessories

- Use only approved accessories.
- Do not connect with incompatible products or accessories.
- Take care not to touch or allow metal objects, such as coins or key rings, to contact or short circuit the battery terminals.

Connection to a car

Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and damaged products

- Do not attempt to disassemble the phone or its accessory.
- Only qualified personnel may service or repair the phone or its accessories.

General precautions

You alone are responsible for how you use your phone and any consequences of its use. You must always switch off your phone wherever the use of a phone is prohibited. The use of your phone is subject to safety measures designed to protect users and their environment.

Avoid applying excessive pressure to the device

Do not apply excessive pressure on the screen or the device to prevent damage. Remove the device from your pants' pocket before sitting down. It is also recommended that you store the device in a protective case and only use the device stylus or your finger when interacting with the touch screen. Cracked display screens due to improper handling are not covered by the warranty.

Device getting warm after prolonged use

When using your device for prolonged periods of time, such as when you're talking on the phone, charging the battery, or browsing the Web, the device may become warm. In most cases, this condition is normal and therefore should not be interpreted as a problem with the device.

Heed service markings

Except as explained elsewhere in the Operating or Service documentation, do not service any product yourself. Service needed on components inside the device should be done by an authorized service technician or provider.

Protect your phone

- Always treat your phone and its accessories with care and keep them in a clean and dust-free environment.

- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture, or high humidity.
- Do not drop, throw or try to bend your phone, or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories, only authorized personnel must do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum 14°F (-10°C) and maximum 113°F (45°C).
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it can break when you sit down.

Damage requiring service

Unplug the product from the electrical outlet and refer servicing to an authorized service technician or provider under the following conditions:

- Liquid has been spilled into or an object has fallen onto the product.
- The product has been exposed to rain or water.
- The product has been dropped or damaged.
- There are noticeable signs of overheating.
- The product does not operate normally when you follow the operating instructions.

Avoid hot areas

The product should be placed away from heat sources such as radiators, heat registers, stoves, or any device producing heat.

Avoid wet areas

Never use the product in a wet location.

Avoid using your device after a dramatic change in temperature

When you move your device between environments with very different temperature and/or humidity ranges, condensation may form on or within the device. To avoid damaging the device, allow sufficient time for the moisture to evaporate before using the device.

NOTICE: When taking the device from low temperature conditions into a warmer environment or from high-temperature conditions into a cooler environment, allow the device to acclimate to room temperature before turning on the power.

Avoid pushing objects into the product

Never push objects of any kind into cabinet slots or other openings in the product. Slots and openings are provided for ventilation. These openings must not be blocked or covered.

Airbags

Do not place a phone in the area over an airbag or in the airbag deployment area. Store the phone safely before driving your vehicle.

Mounting accessories

Do not use the product on an unstable table, cart, stand, tripod, or bracket. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.

Use product with approved equipment

This product should be used only with personal computers and options identified as suitable for use with your equipment.

Adjust the volume

Turn down the volume before using headphones or other audio devices.

Cleaning

Unplug the product from the wall outlet before cleaning.

Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning, but NEVER use water to clean the LCD screen.

Small children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it. They could hurt themselves, or others, or could accidentally damage the phone. Your phone contains small parts with sharp edges that may cause an injury, or which could become detached and create a choking hazard.

Repetitive motion injuries

To minimize the risk of RSI, when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Make use of the special features in the handset which minimize the number of buttons which have to be pressed, such as message templates and predictive text.
- Take lots of breaks to stretch and relax.

Operating machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

Loud noise

This phone is capable of producing loud noises which may damage your hearing.

Emergency calls

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Regulatory agency identifications

FCC Regulations

This mobile phone complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off

and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Information (SAR)

This mobile phone meets the government's requirements for exposure to radio waves. This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the head is 0.74 W/kg, and when worn on the body is 1.07 W/kg.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: 2APXW-WTATTRW2.

For body-worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on.

Hearing Aid Compatibility

(HAC) for Wireless Telecommunication Devices

This phone has a HAC rating of M4/T4.

What is hearing aid compatibility?

The Federal Communications Commission has implemented rules and a rating system designed to enable people who wear hearing aids to more effectively use these wireless telecommunications devices. The standard for compatibility of digital wireless phones with hearing aids is set forth in American National Standard Institute (ANSI) standard C63.19. There are two sets of ANSI standards with ratings from one to four (four being the best rating): an "M" rating for reduced interference making it easier to hear conversations on the phone when using the hearing aid microphone, and a

"T" rating that enables the phone to be used with hearing aids operating in the telecoil mode thus reducing unwanted background noise.

How will I know which wireless phones are hearing aid compatible?

The Hearing Aid Compatibility rating is displayed on the wireless phone box. A phone is considered Hearing Aid Compatible for acoustic coupling (microphone mode) if it has an "M3" or "M4" rating. A digital wireless phone is considered Hearing Aid Compatible for inductive coupling (telecoil mode) if it has a "T3" or "T4" rating.

Warranty

With this manufacturer's warranty (hereinafter: the "Warranty"), Emblem Solutions (hereinafter: the "Manufacturer") guarantees this product against any material, design and manufacturing defects. The duration of this Warranty is specified in article 1 below.

This Warranty does not affect your statutory rights, which cannot be excluded or limited, in particular in relation to the applicable legislation on defective products.

Warranty duration:

The product may consist of several parts, which may have separate warranty periods, to the extent permitted by local laws. The "Warranty Period" (as defined in the table below) takes effect on the date of purchase of the product (as indicated on the proof of purchase) or date of product delivery and activation (if required), whichever is later.

1. Warranty period (see table below)

Phone	24 Months
USB Cable and Charger	12 Months
Other Accessories (if included in the box)	12 Months

2. Warranty period for repaired or replaced parts:

Subject to special provisions of local laws in force, the repair or replacement of a product does not, under any circumstances whatsoever, extend the original warranty period of the product concerned. However, the repaired or replaced parts are guaranteed in the same manner and for the same defect for a period of ninety days after delivery of the repaired product, even if their initial warranty period has expired. Proof of purchase required.

Implementation of the Warranty

If your product is faulty under normal conditions of use and maintenance, in order to benefit from the present warranty, please contact the Returns Center at 1(800) 801-1101 for assistance. The customer support center will then provide you with instructions on how to return the product for support under warranty. For more information, please visit www.att.com/warranty.

Warranty exclusions

Manufacturer guarantees its products against material, design and manufacturing defects. The Warranty does not apply in the following cases:

1. Normal wear and tear of the product (including on camera lenses, batteries and screens) requiring periodic repair and replacement.

2. Defects and damages due to negligence, to the product being used other than in a normal and customary manner, to the non-compliance with the recommendations of this User Manual, to an accident, regardless of the cause. Instructions for use and maintenance of the product can be found in your product's User Manual.
3. The opening, unauthorized disassembly, modification being carried out or repair of the product by the end user or by persons or by service providers not approved by Manufacturer and/or with spare parts not approved by Manufacturer.
4. Use of the product with accessories, peripherals and other products whose type, condition and/or standards do not meet Manufacturer's standards.
5. Defects associated with the use or connection of the product to equipment or software not approved by Manufacturer. Some defects may be caused by viruses due to unauthorized access by yourself or by a third-party service, computer systems, other accounts or networks. This unauthorized access may take place through hacking, misappropriation of passwords or various other means.
6. Defects and damage due to the exposure of the product to humidity, extreme temperatures, corrosion, oxidation, or to any spillage of food or liquids, chemicals and generally any substance likely to alter the product.
7. Any failure of embedded services and applications that have not been developed by Manufacturer and whose functioning is the exclusive responsibility of their designers.
8. Installation and use of the product in a manner that does not comply with the technical or security standards of regulations in force in the country where it's installed or used.
9. Modification, alteration, degradation or illegibility of the IMEI number, serial number or EAN of the product.

10. Absence of proof of purchase.

Upon expiration of the warranty period or upon an exclusion of warranty, Manufacturer may, at its discretion, provide a quote for the repair and offer to provide support for the product, at your cost.

The Manufacturer contact and after-sales service details are subject to change. These Warranty terms may vary substantially according to your country of residence.